 


KOJI MASUDA



MODEL: 70142

SIZE: 52-18-142

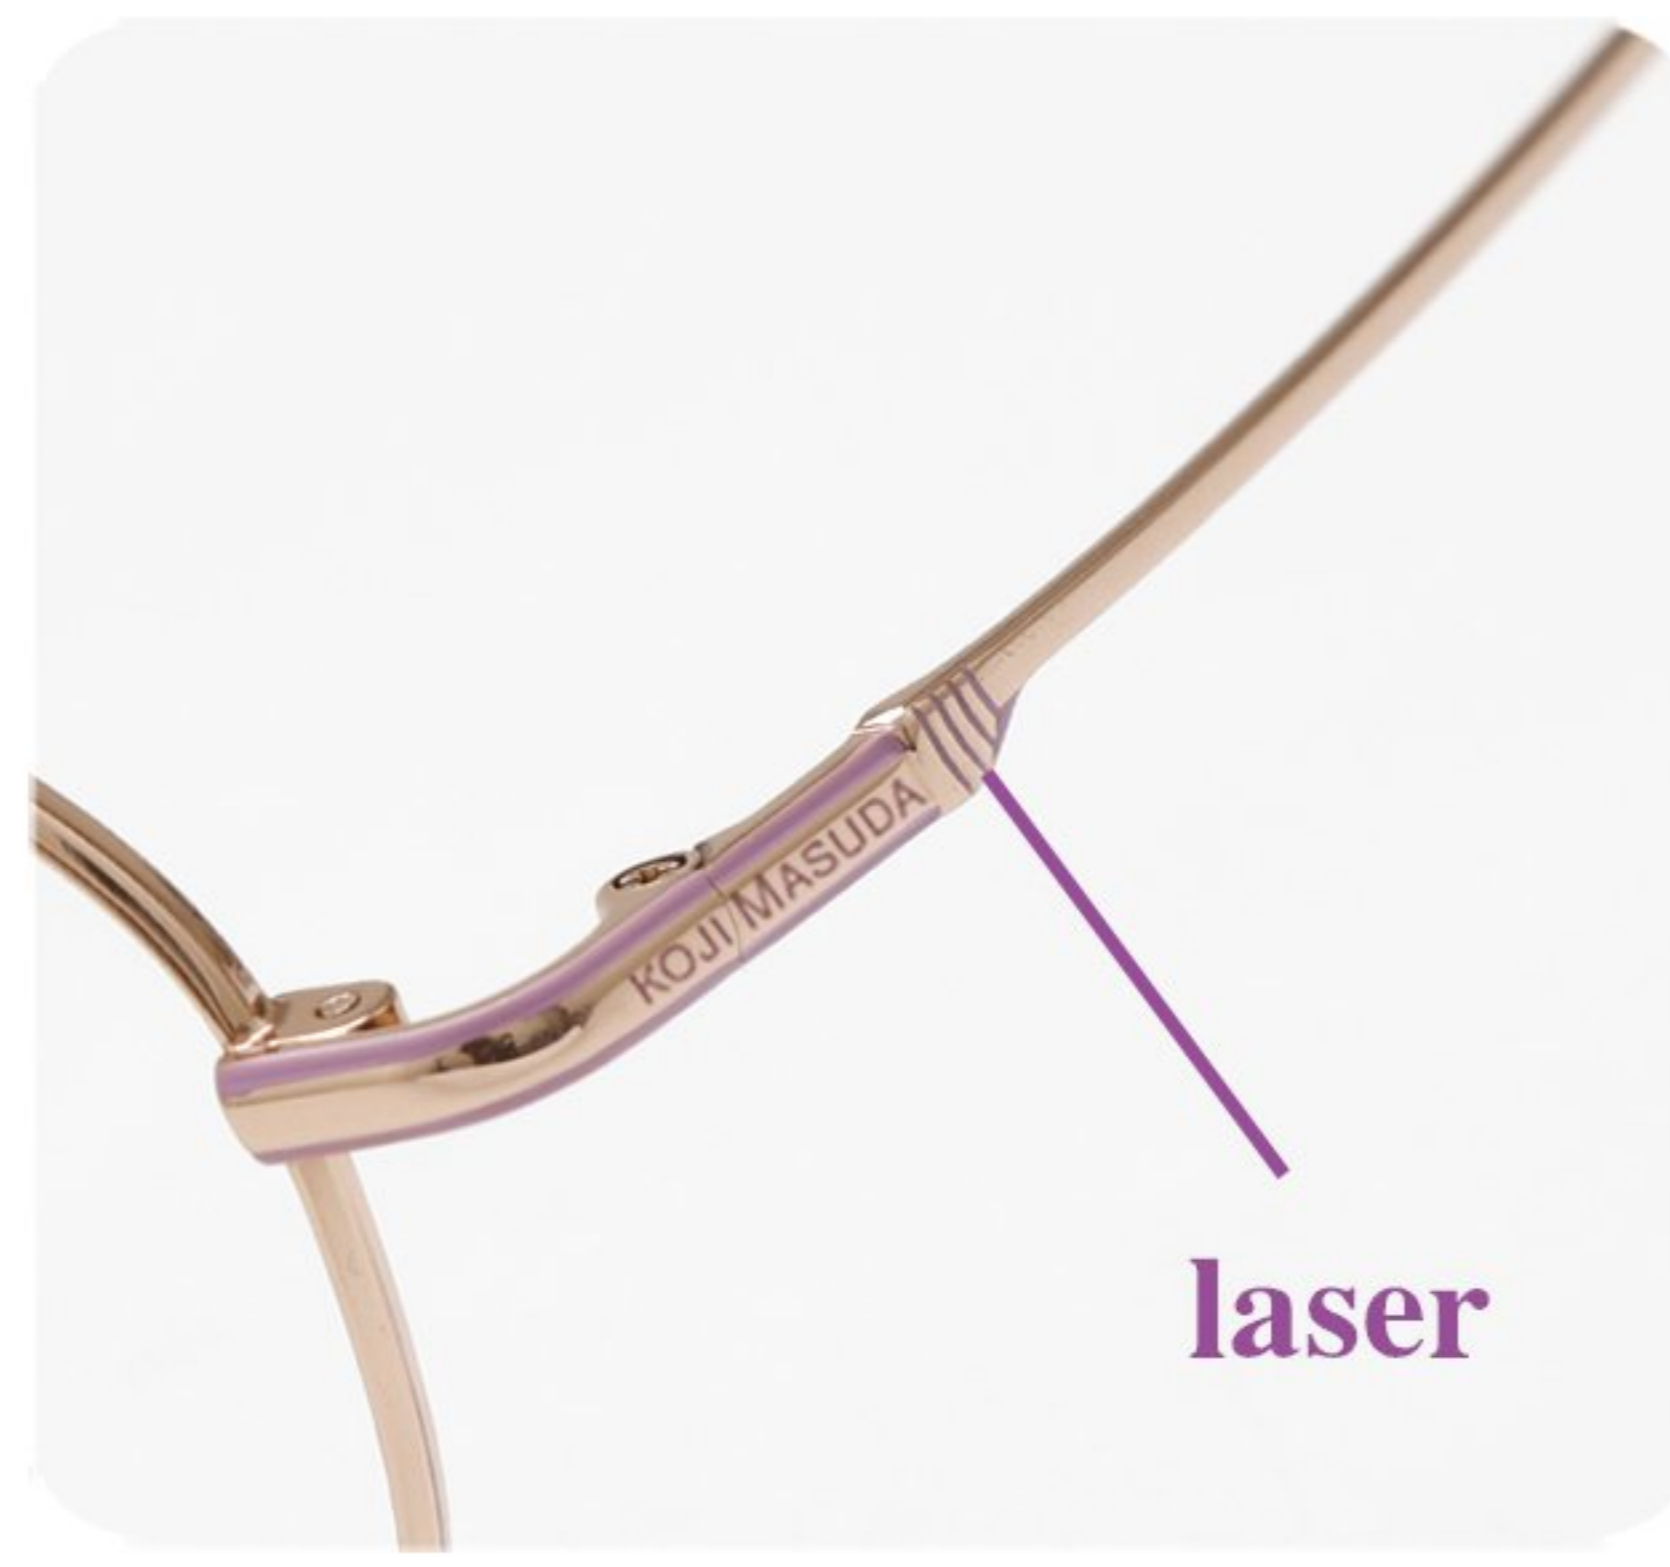

COLOR DISPLAY



C1 哑银/浅灰
Matte Silver/Light Grey



C2 亮玫瑰金/芥末兰
Bright Rose Gold/Mustard Orchid



C3 亮玫瑰金/珊瑚粉
Bright Rose Gold/Coral Powder



C4 亮玫瑰金/哑黑
Bright Rose Gold/Matte Black



C5 亮玫瑰金
Bright Rose Gold



 
C6 亮中枪/亮黑
Bright Gun/Bright Black

KOJI MASUDA



MODEL: 70139

SIZE: 54-18-143

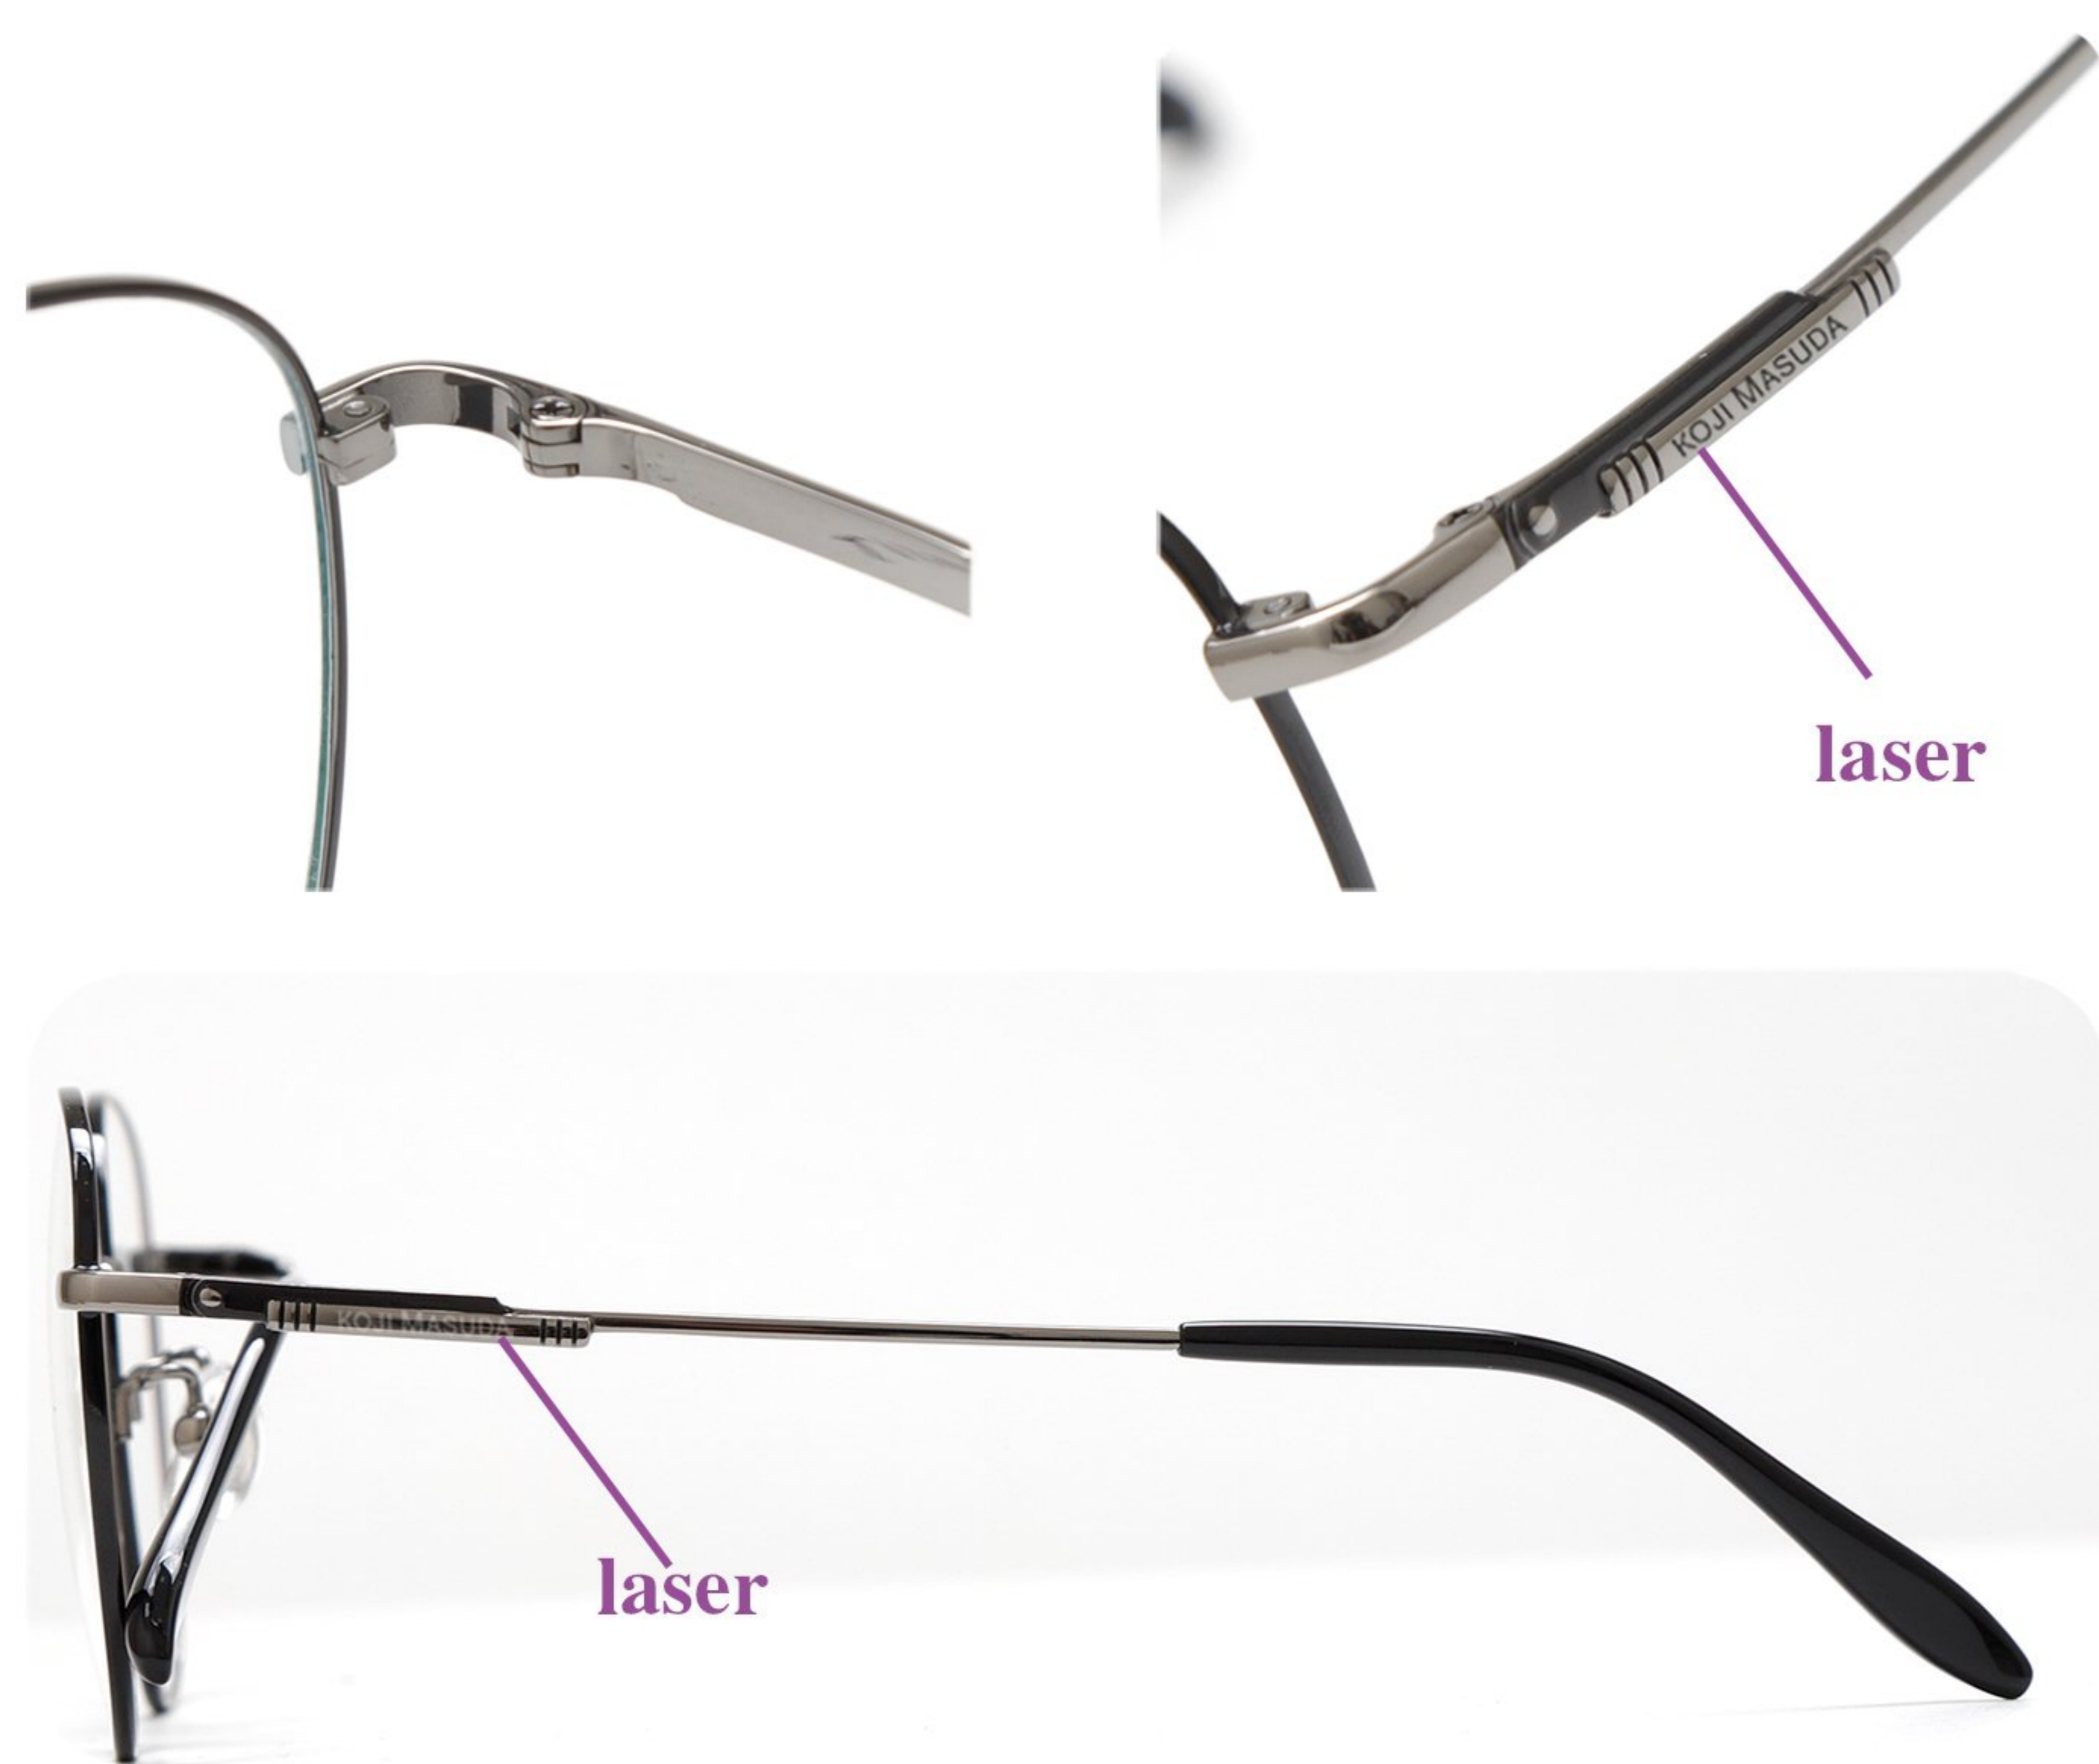

COLOR DISPLAY



C1 亮玫瑰金/哑玫瑰金
Bright Rose Gold/Matte Rose Gold



C2 哑银/浅灰紫
Matte Silver/Light Grey Purple



C3 浅金/浅绿
Light Gold/Light Green



C4 浅金/浅粉
Light Gold/Light Pink



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



 
C6 亮中枪/亮黑
Bright Gun/Bright Black

KOJI MASUDA



MODEL: 70138

SIZE: 53-18-143

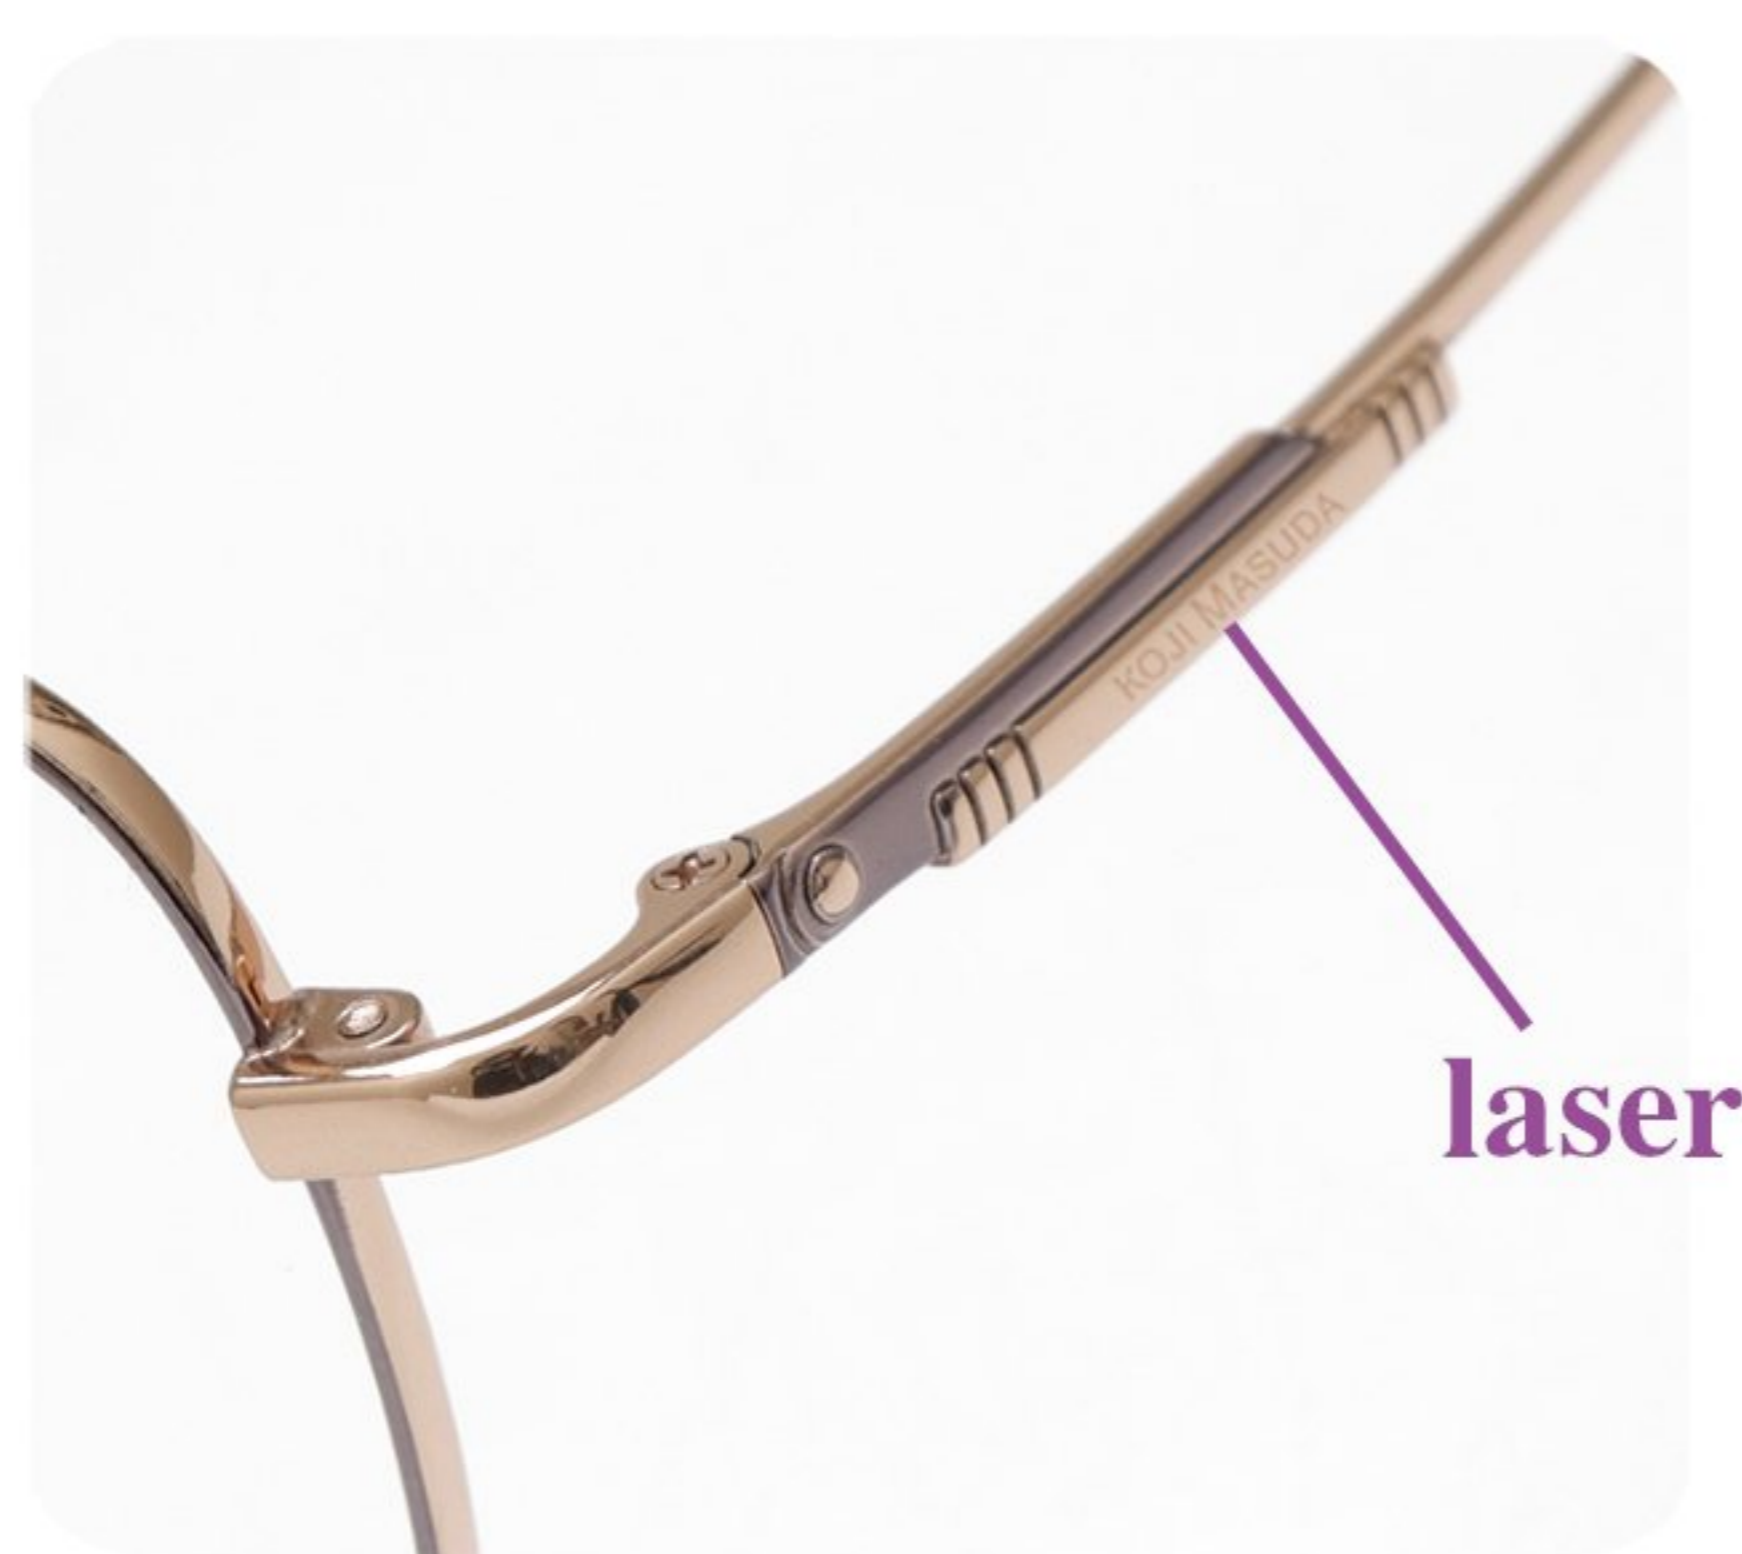

COLOR DISPLAY



C1 亮玫瑰金/哑玫瑰金
Bright Rose Gold/Matte Rose Gold



C2 亮银/芥末绿
Bright Silver/Mustard Green



C3 粉金/浅粉
Pink Gold/Light Pink



C4 浅金/象牙白
Light Gold/Ivory White



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



 
C6 亮中枪/亮黑
Bright Gun/Bright Black

KOJI MASUDA



MODEL: 70136

SIZE: 53-18-145

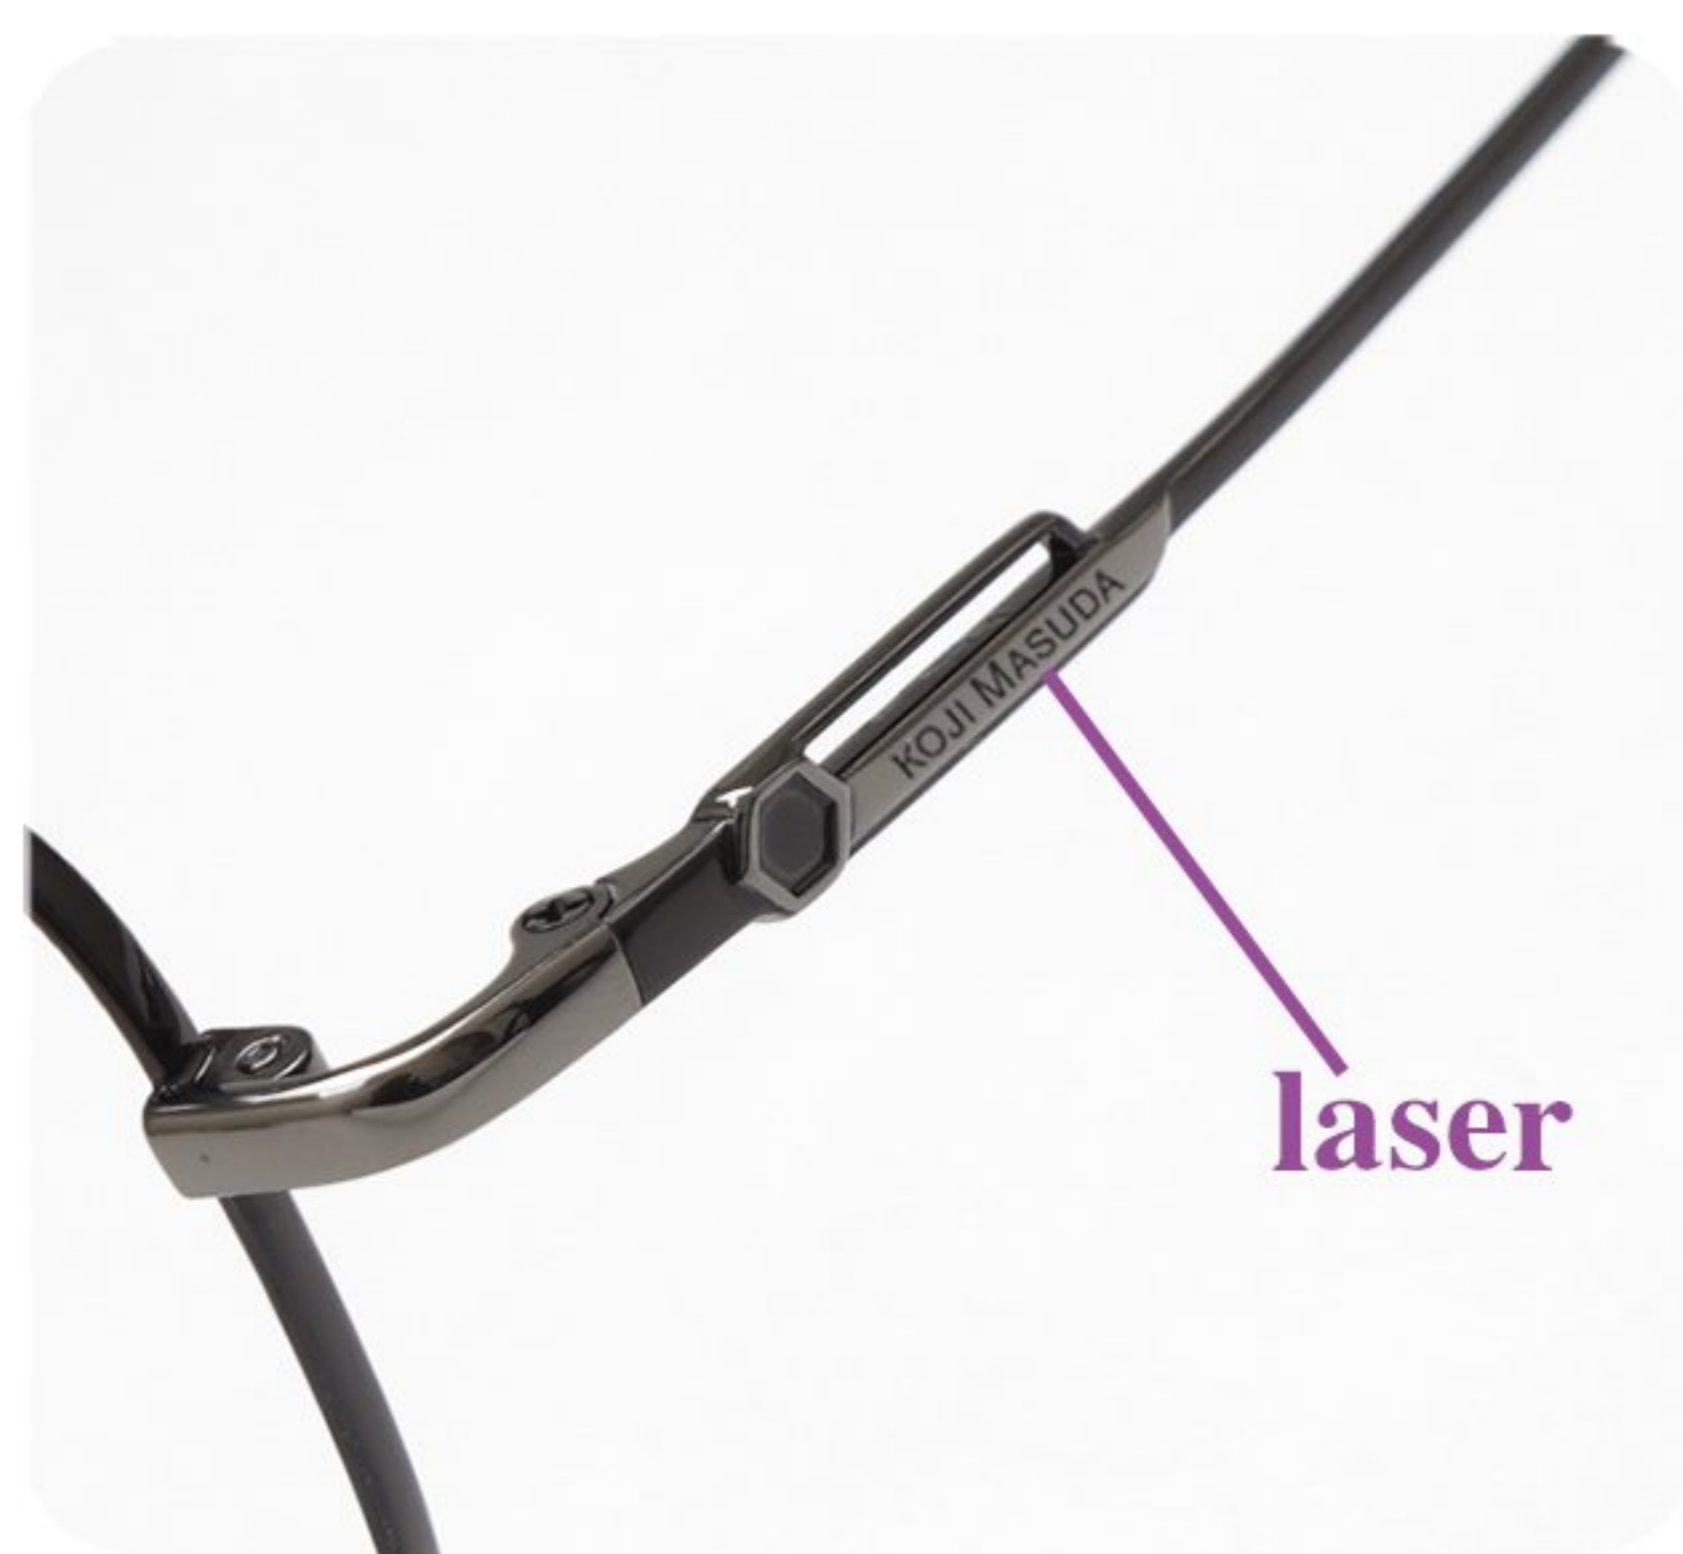

COLOR DISPLAY



C1 拉丝金/奶油白
Brushed Gold/Cream White



C2 亮玫瑰金/哑玫瑰金
Bright Rose Gold/Matte Rose Gold



C3 亮棕/紫
Bright Brown/Purple



C4 亮银/哑黑
Bright Silver/Matte Black



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



 
 
C6 亮中枪/亮黑
Bright Gun/Bright Black

KOJI MASUDA



MODEL: 70135

SIZE: 52-18-145

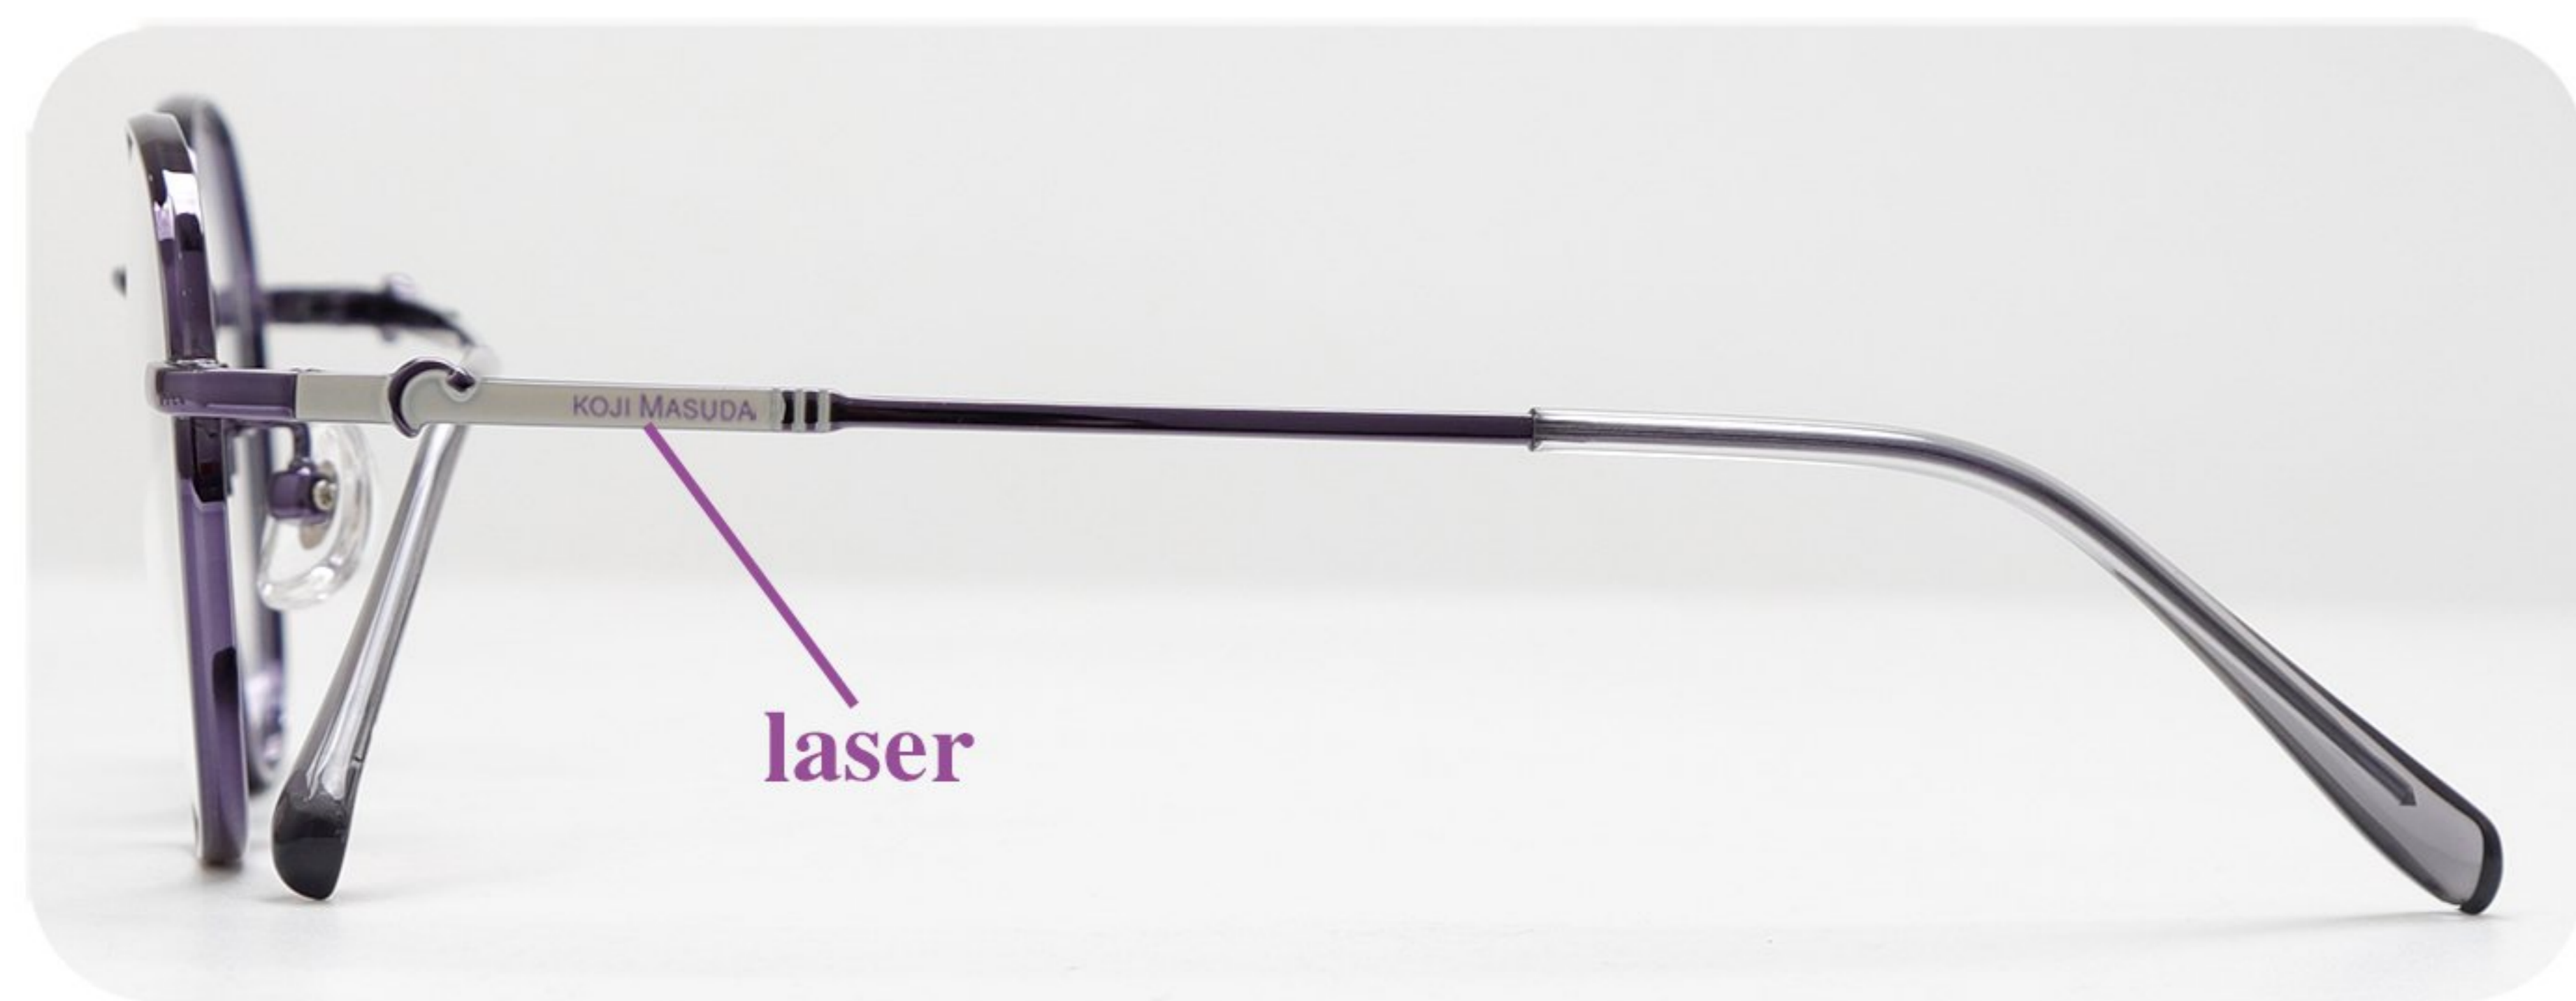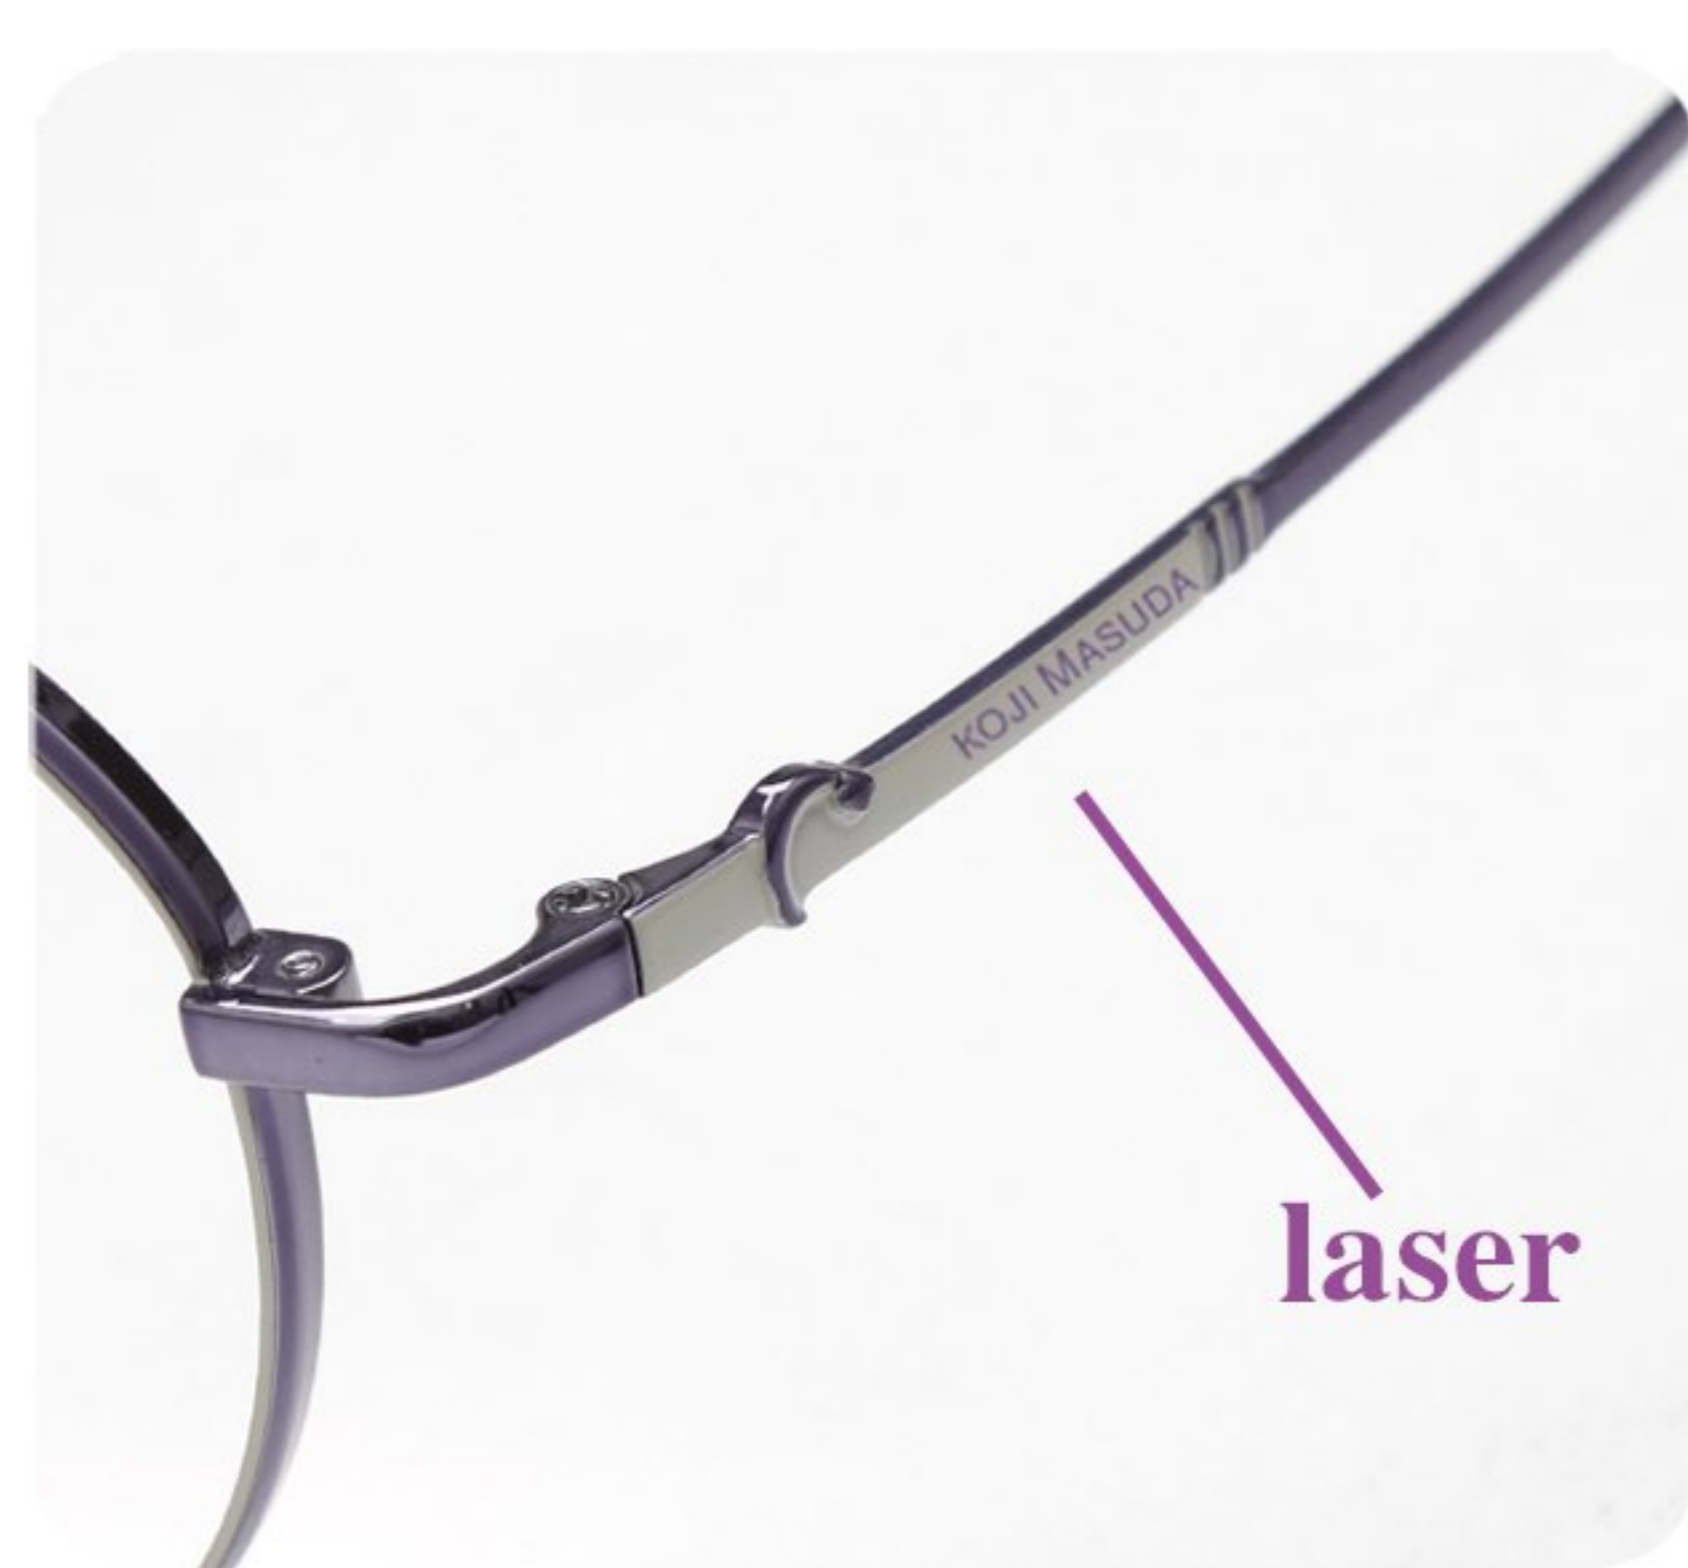

COLOR DISPLAY



C1 蓝紫金/象牙白
Blue Purple Gold/Lvory White



C2 浅棕/粉
Light Brown/Pink



C3 铬银/象牙灰
Chrome Silver/Lvory Grey



C4 玫瑰金/浅灰绿
Rose Gold/Light Grey Green



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



 
 
C6 亮中枪/亮黑
Bright Gun/Bright Black

KOJI MASUDA



MODEL: 70134

SIZE: 52-18-142

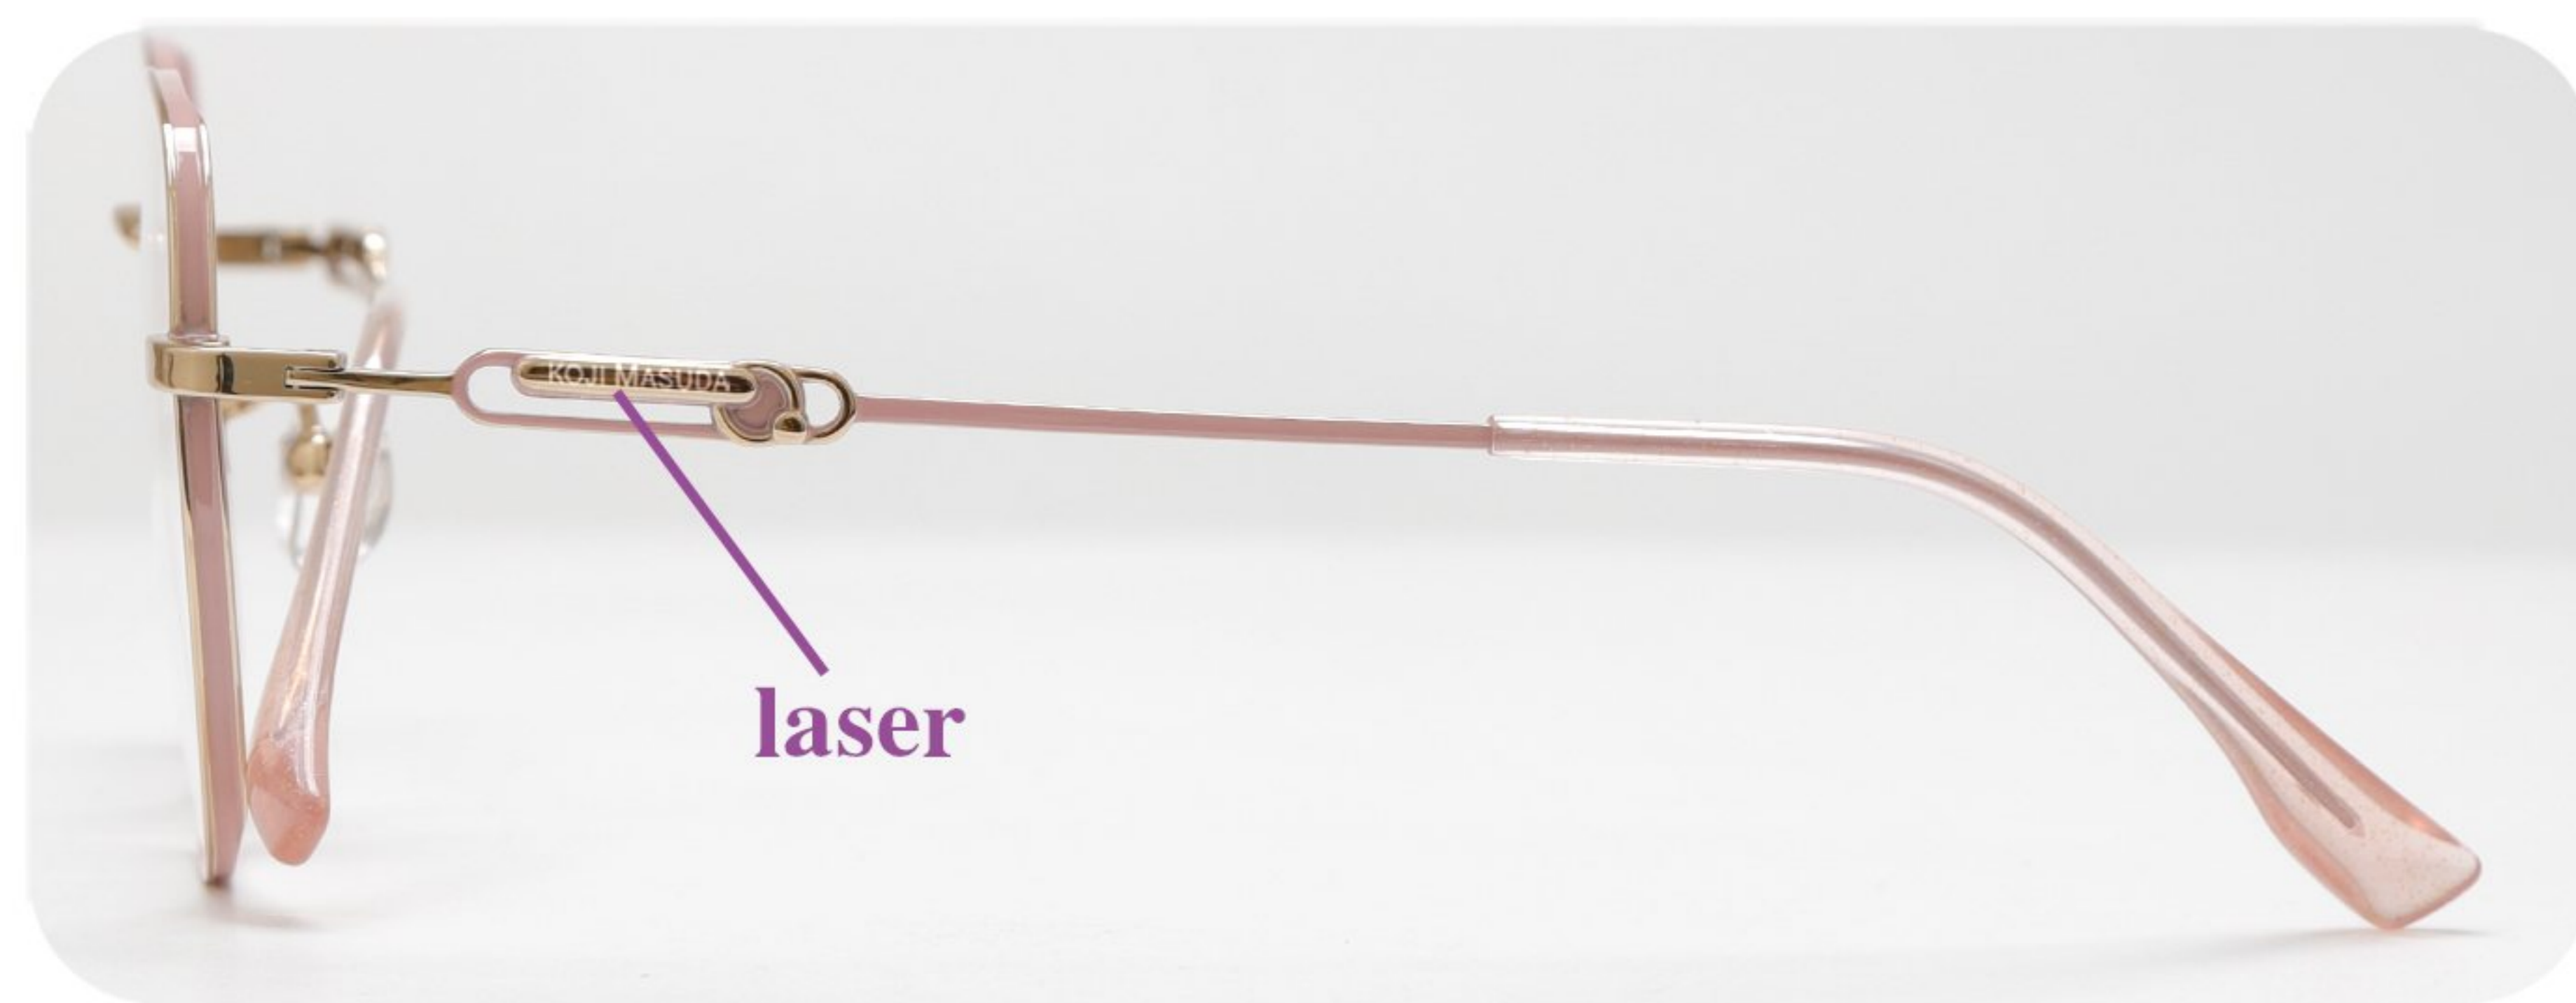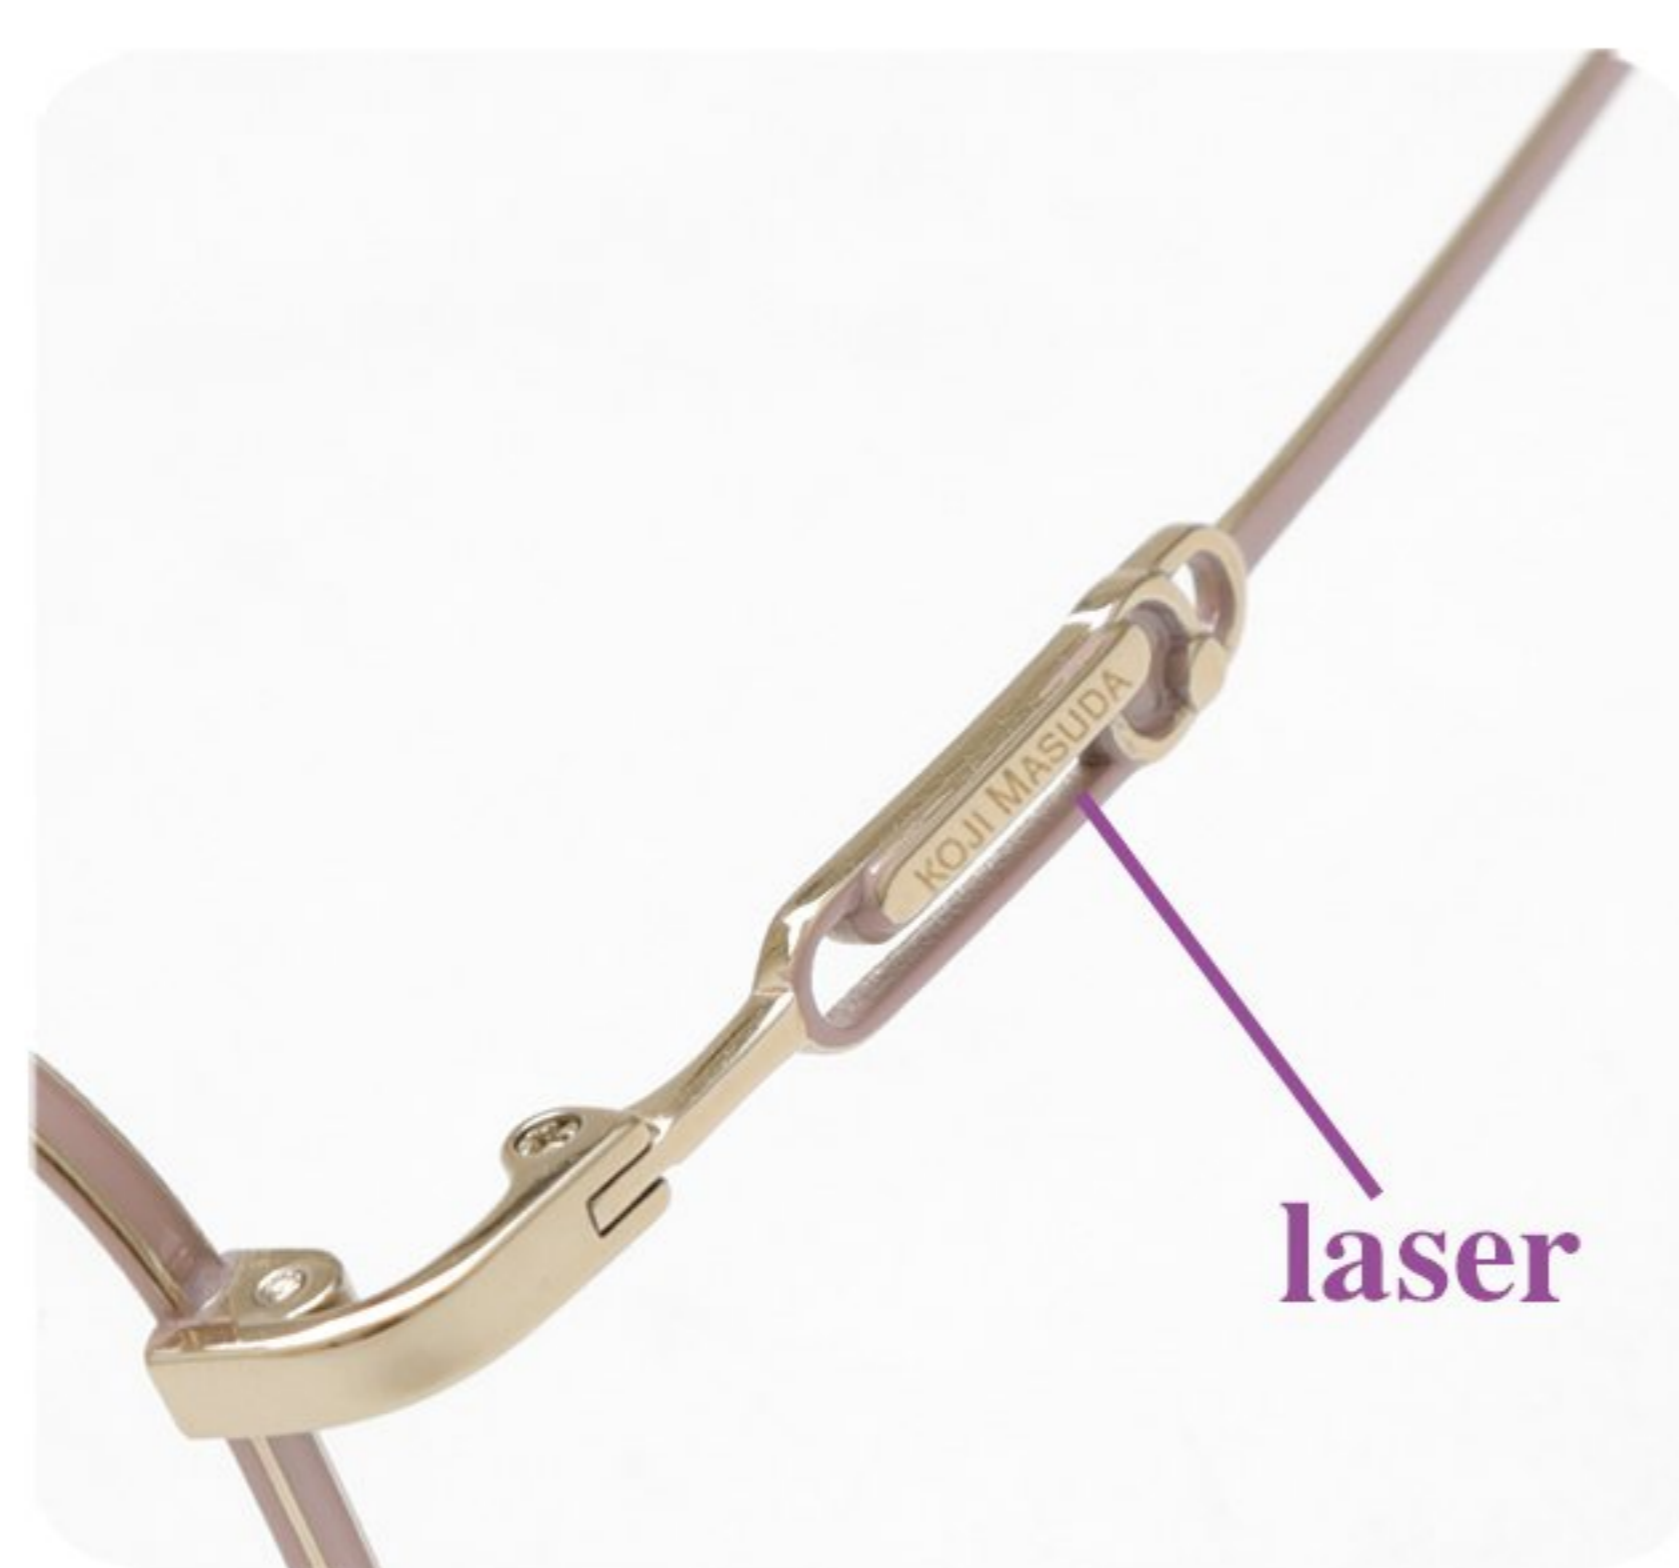

COLOR DISPLAY



C1 浅金/粉
Light Gold/Pink



C2 哑银/米白
Dumb Silver/Rice White



C3 香槟金/紫
Champagne Gold/Purple



C4 亮棕/绿
Bright brown/Green



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



 
C6 亮中枪/亮黑
Bright Gun/Bright Black

KOJI MASUDA



MODEL: 70133

SIZE: 54-18-145

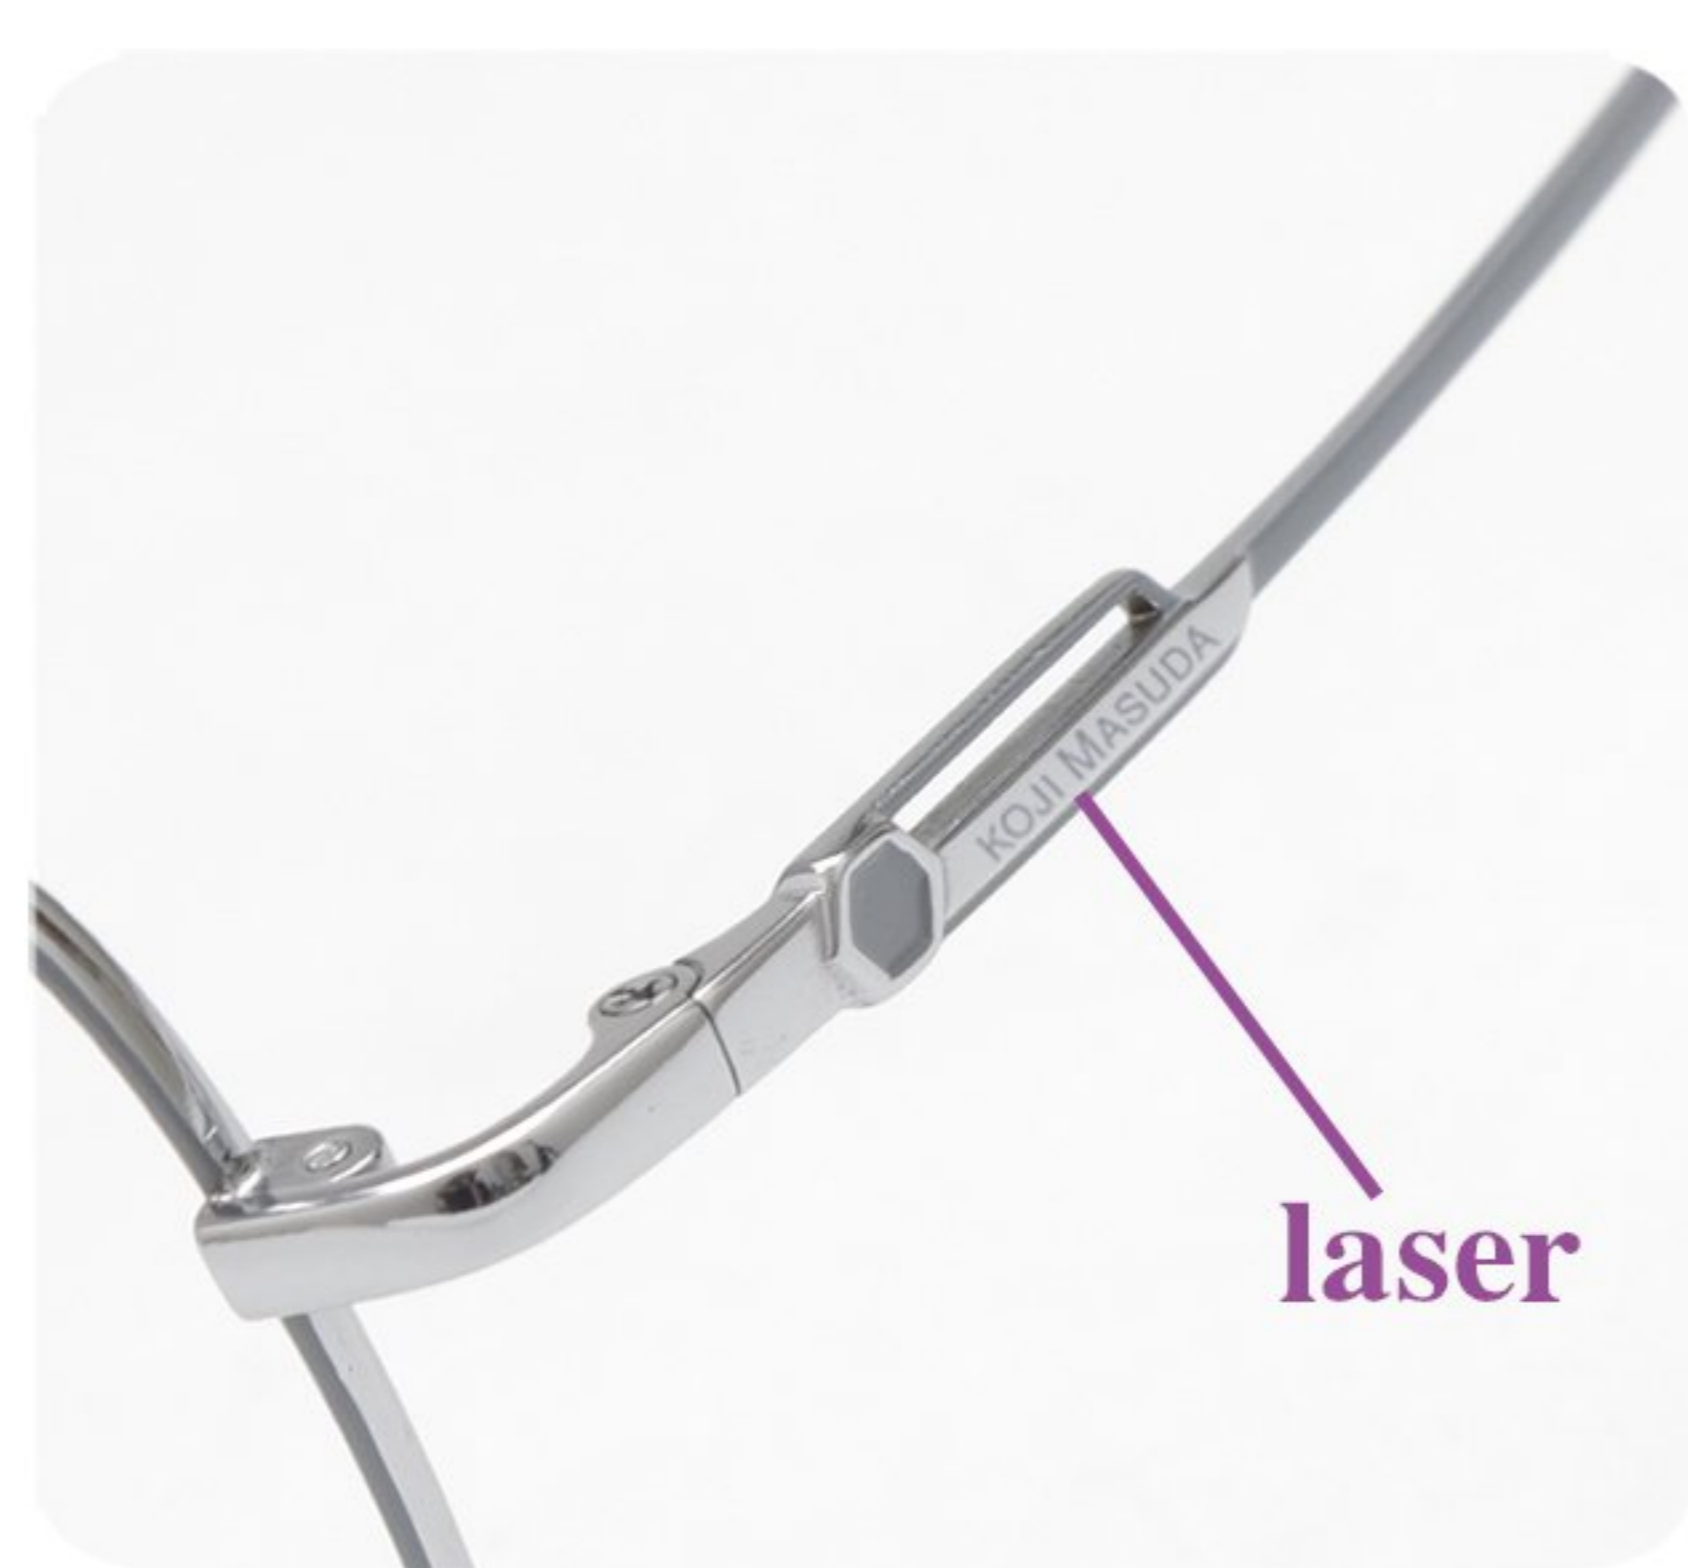

COLOR DISPLAY



C1 紫金/哑灰绿
Purple Gold/Dumb Gray Green



C2 亮玫瑰金/哑玫瑰金
Bright Rose Gold/Matte Rose Gold



C3 亮棕/紫
Bright Prown/Purple



C4 亮银/大象灰
Bright Silver/Elephant Grey



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



C6 亮中枪/亮黑
Bright Gun/Bright Black

KOJI MASUDA



Titanium

KOJI MASUDA
eyes

MODEL: 70132

 
SIZE: 52-18-142



laser



laser

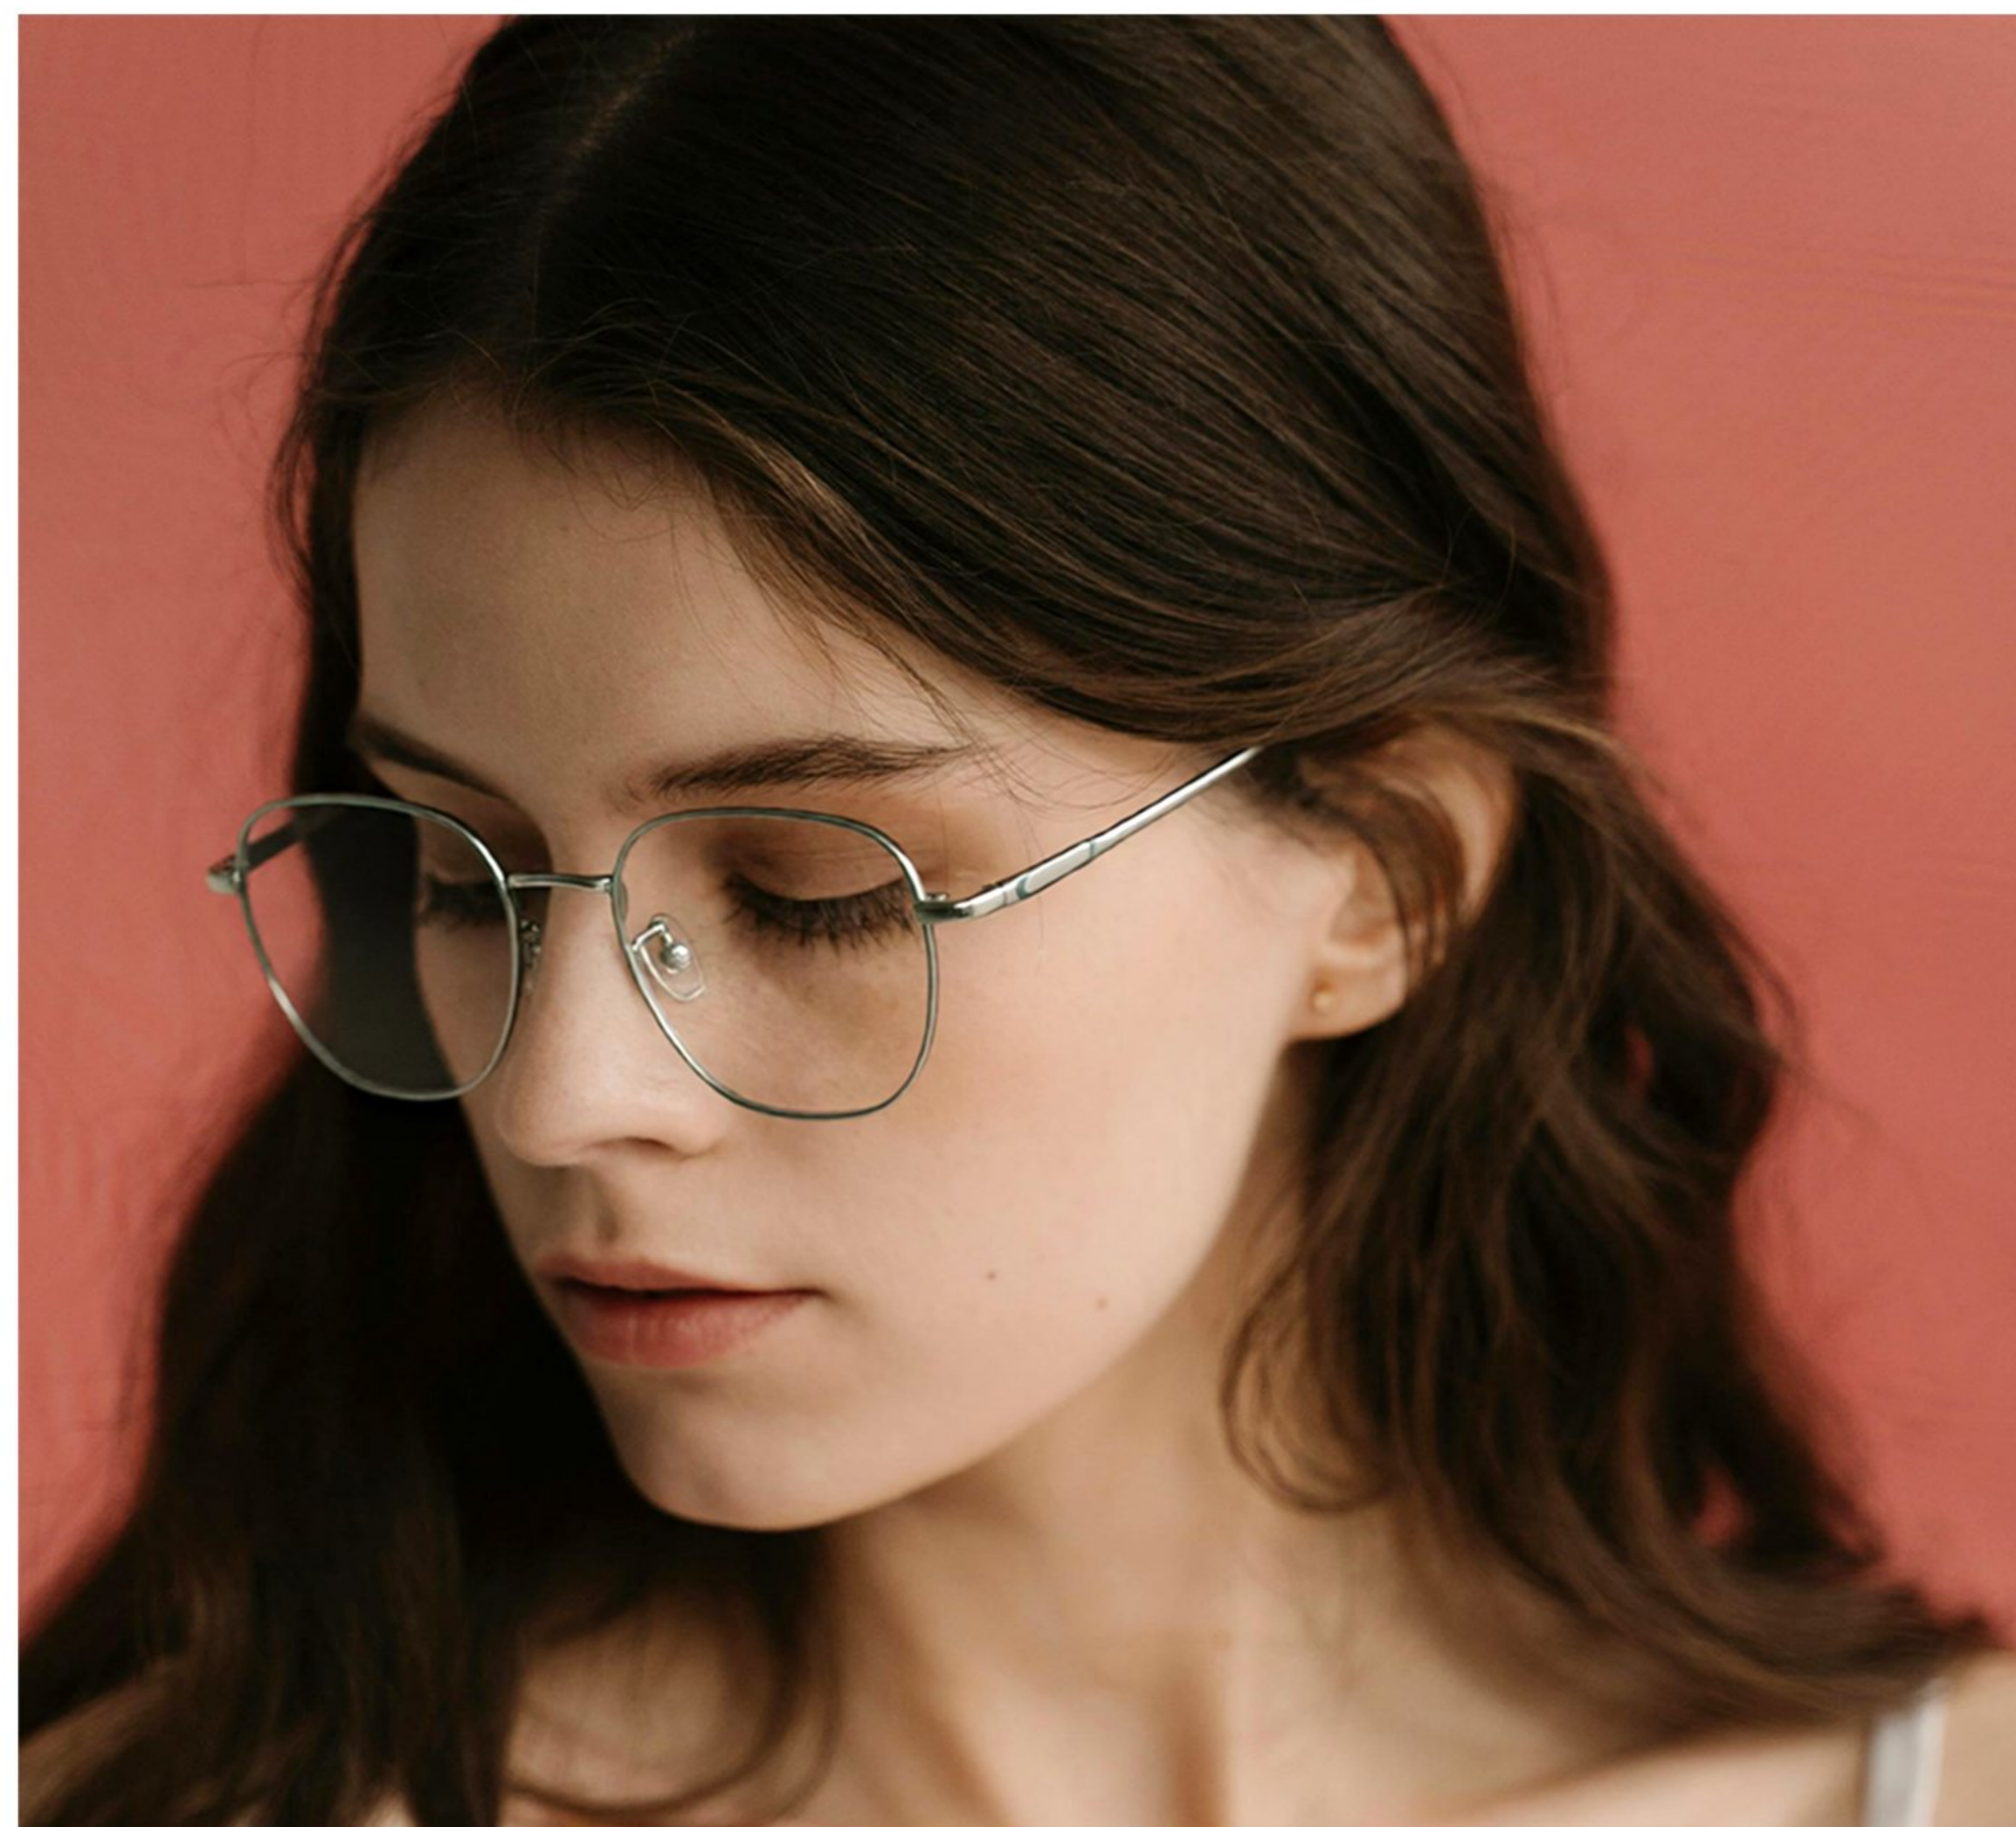

COLOR DISPLAY



C1 粉金/哑粉
Pink Gold/Matte Powder



C2 浅金/浅咖
Shallow Gold/Shallow Coffee



C3 浅金/浅紫
Light Gold/Light Purple



C4 亮银/绿
Bright Silver/Green



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



 
C6 亮中枪/亮黑
Bright Gun/Bright Black

KOJI MASUDA



MODEL: 70131

SIZE: 51-18-142

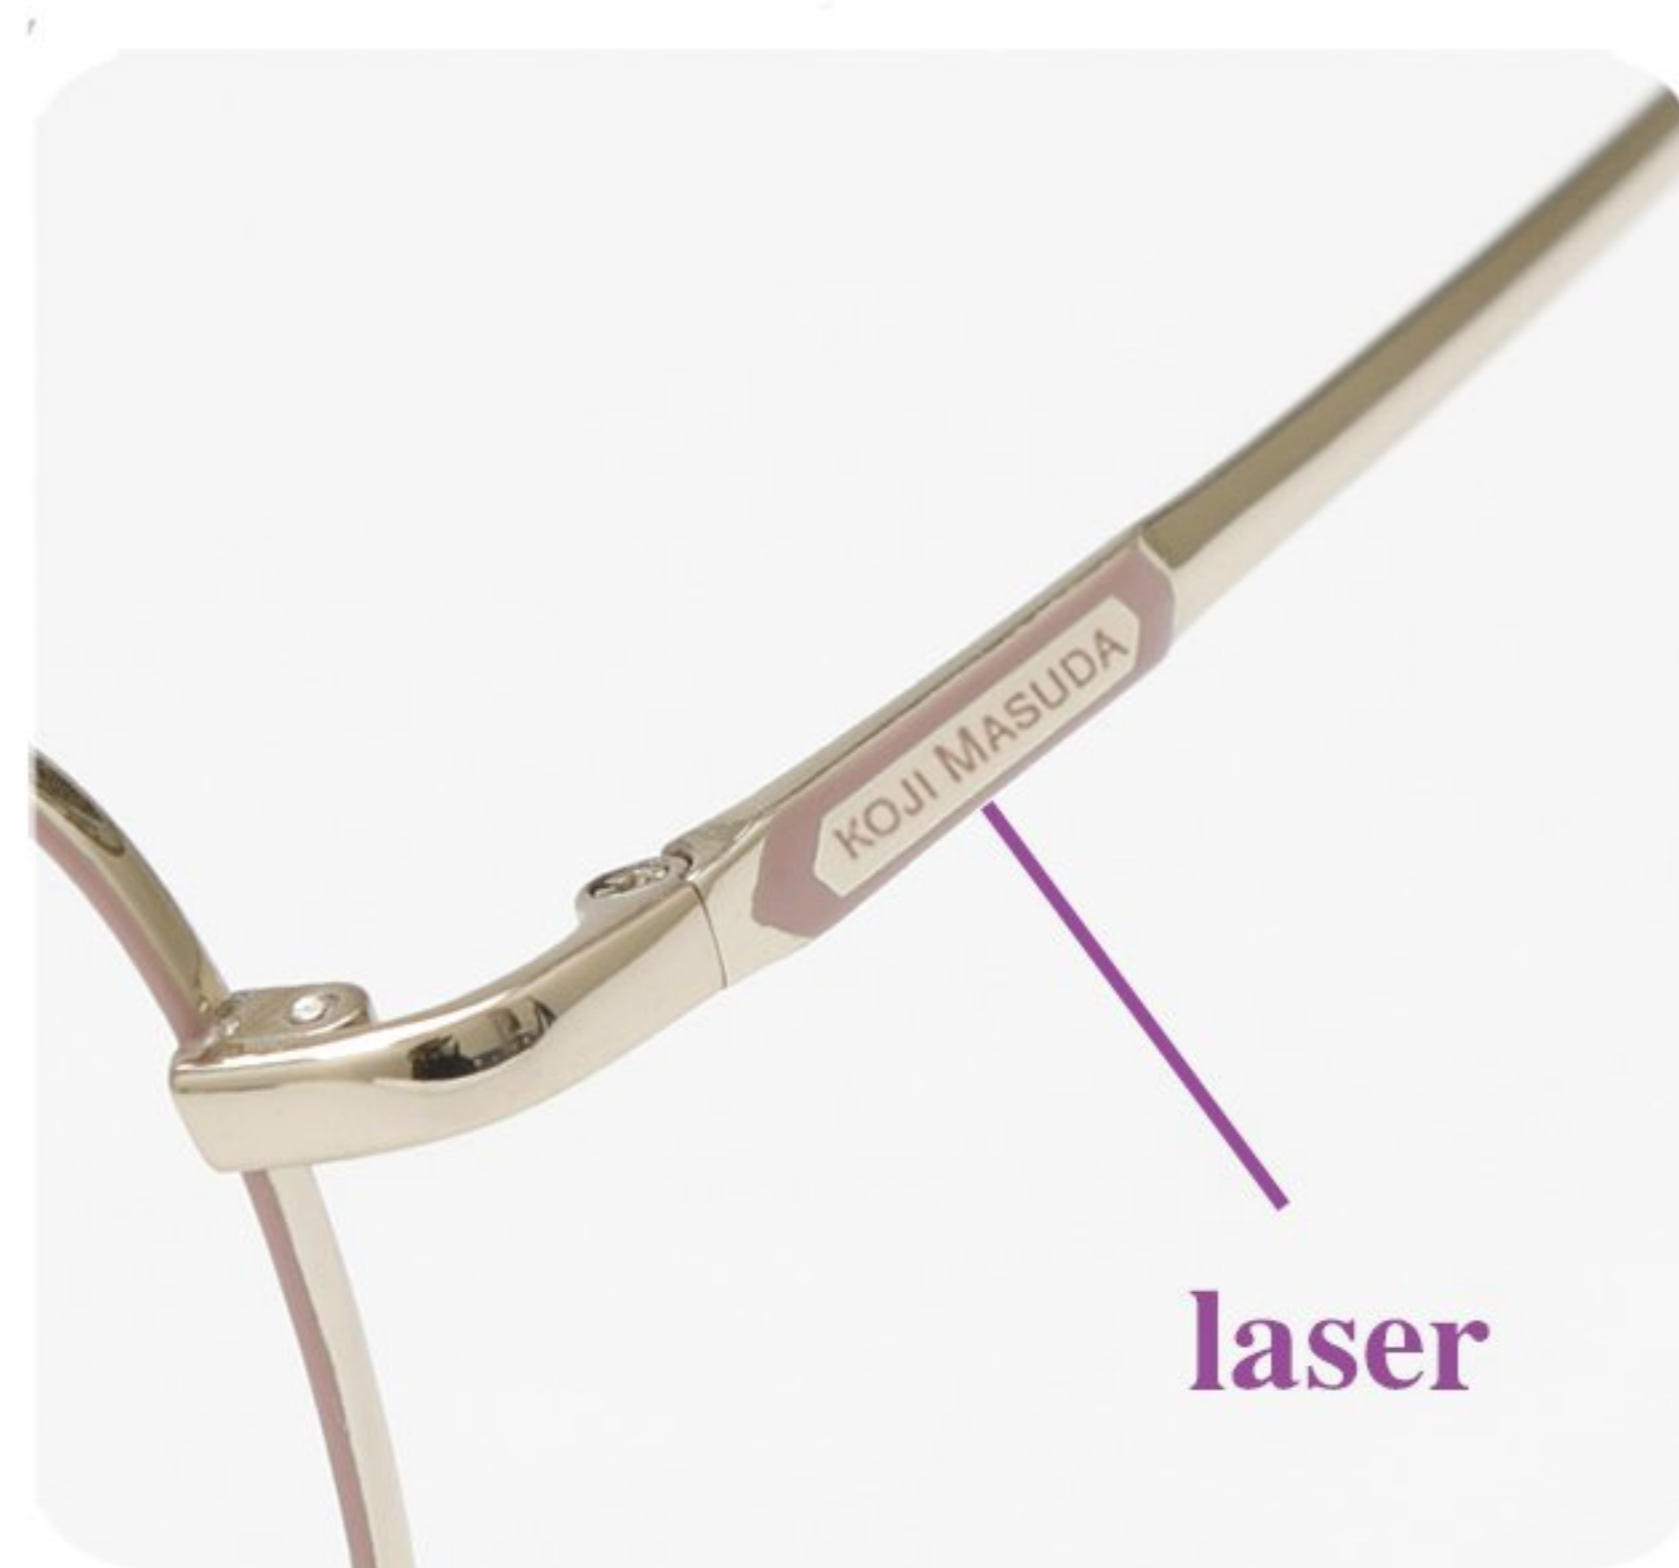

COLOR DISPLAY



C1 亮银/紫
Bright Silver/Purple



C2 红棕/墨绿
Reddish Brown/Dark Green



C3 浅金/驼
Light Gold/Camel



C4 浅金/哑粉
Light Gold/Matte Powder



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



 
 
C6 亮中枪/亮黑
Bright Gun/Bright Black

KOJI MASUDA



MODEL: 70130

SIZE: 50-18-142

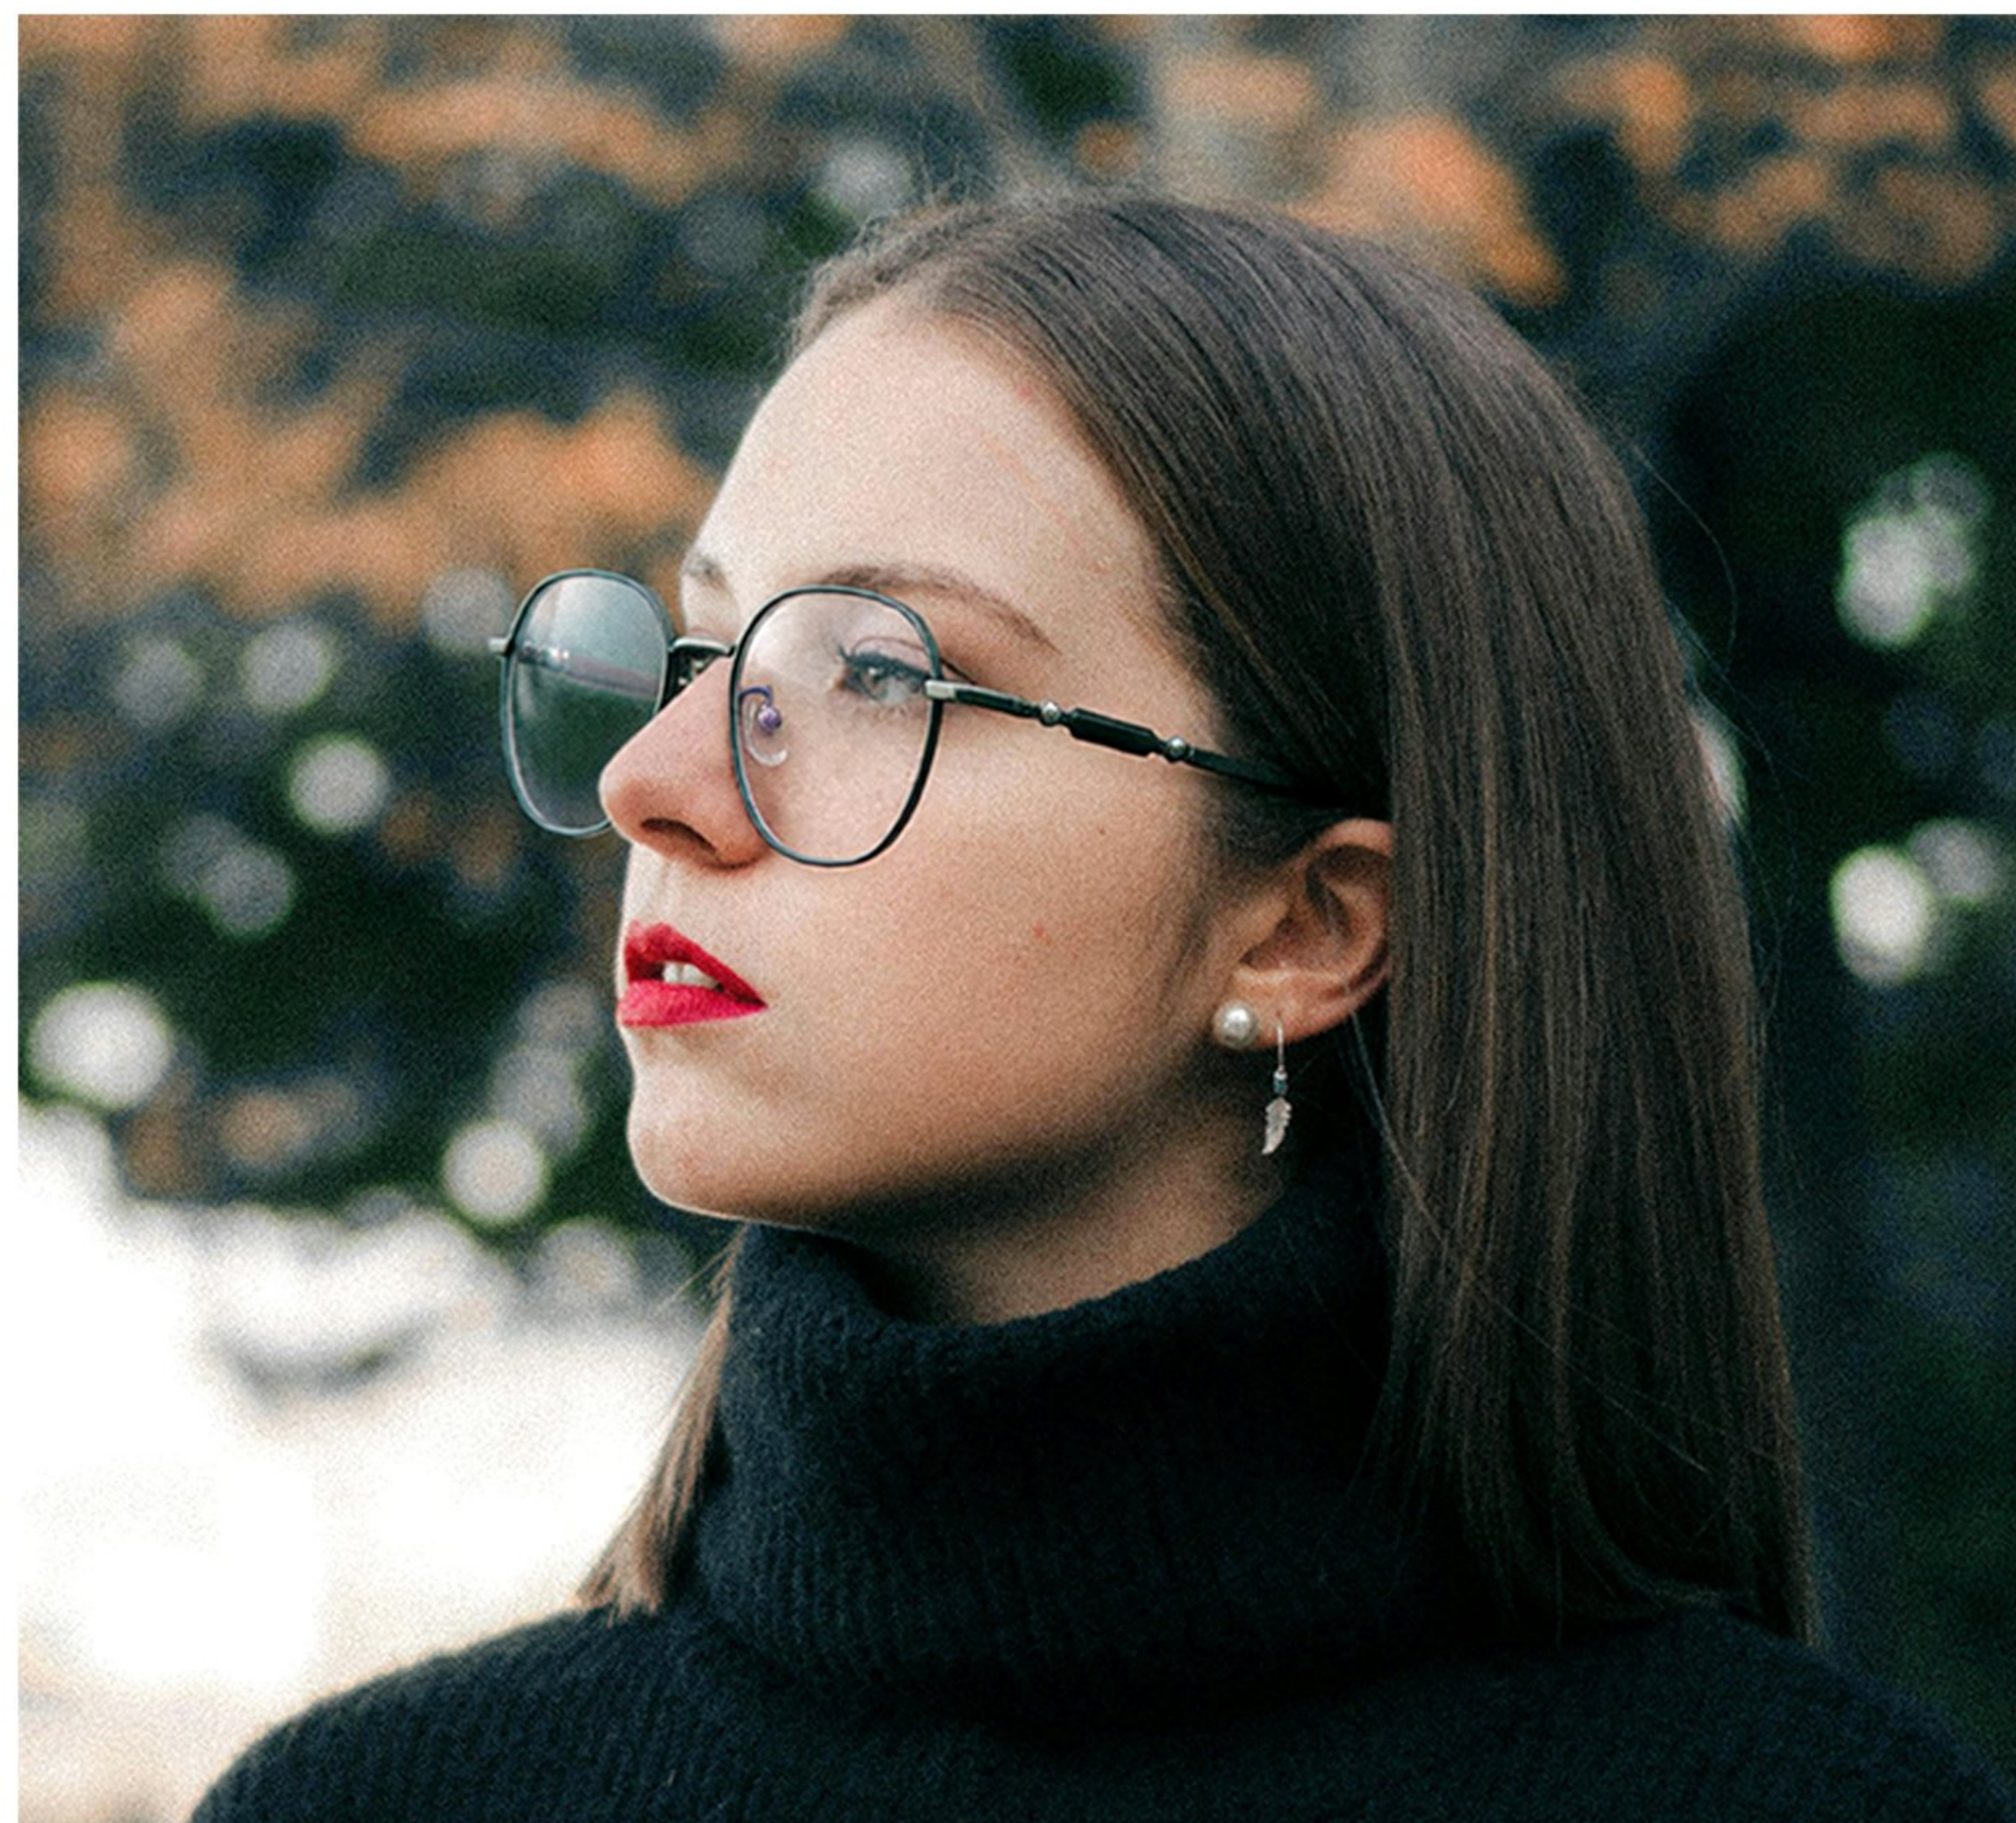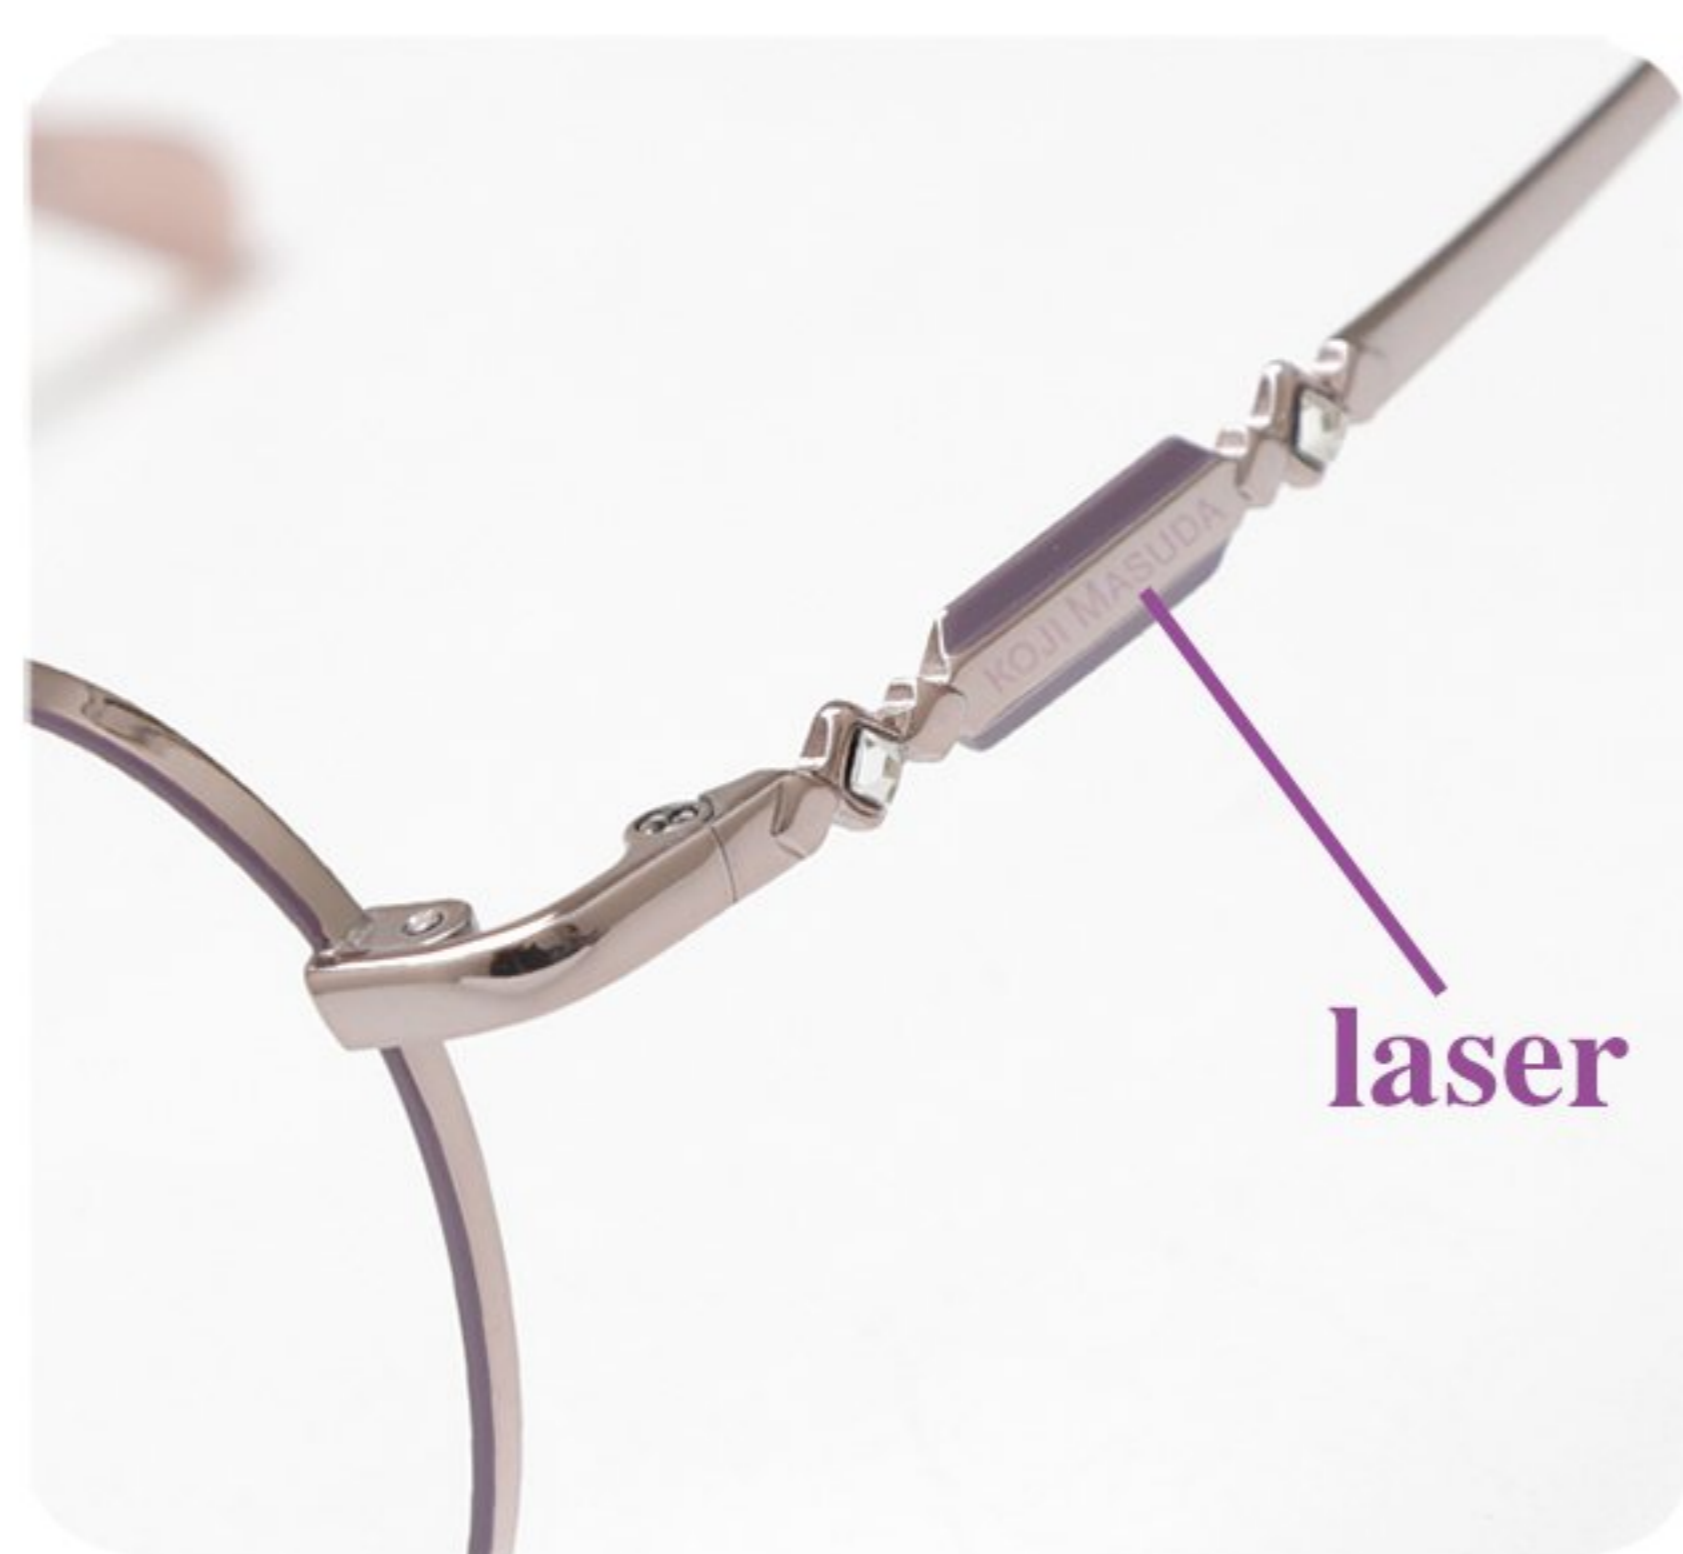

COLOR DISPLAY



C1 亮玫瑰金/哑橙
Bright Rose Gold/Dumb Orange



C2 浅金/哑浅绿
Light Gold/Matte Light Green



C3 粉金/哑紫
Pink Gold/Matte Purple



C4 浅金/哑粉
Light Gold/Matte Pink



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



 
C6 亮中枪/亮黑
Bright Gun/Bright Black

KOJI MASUDA



MODEL: 70128

SIZE: 51-18-142

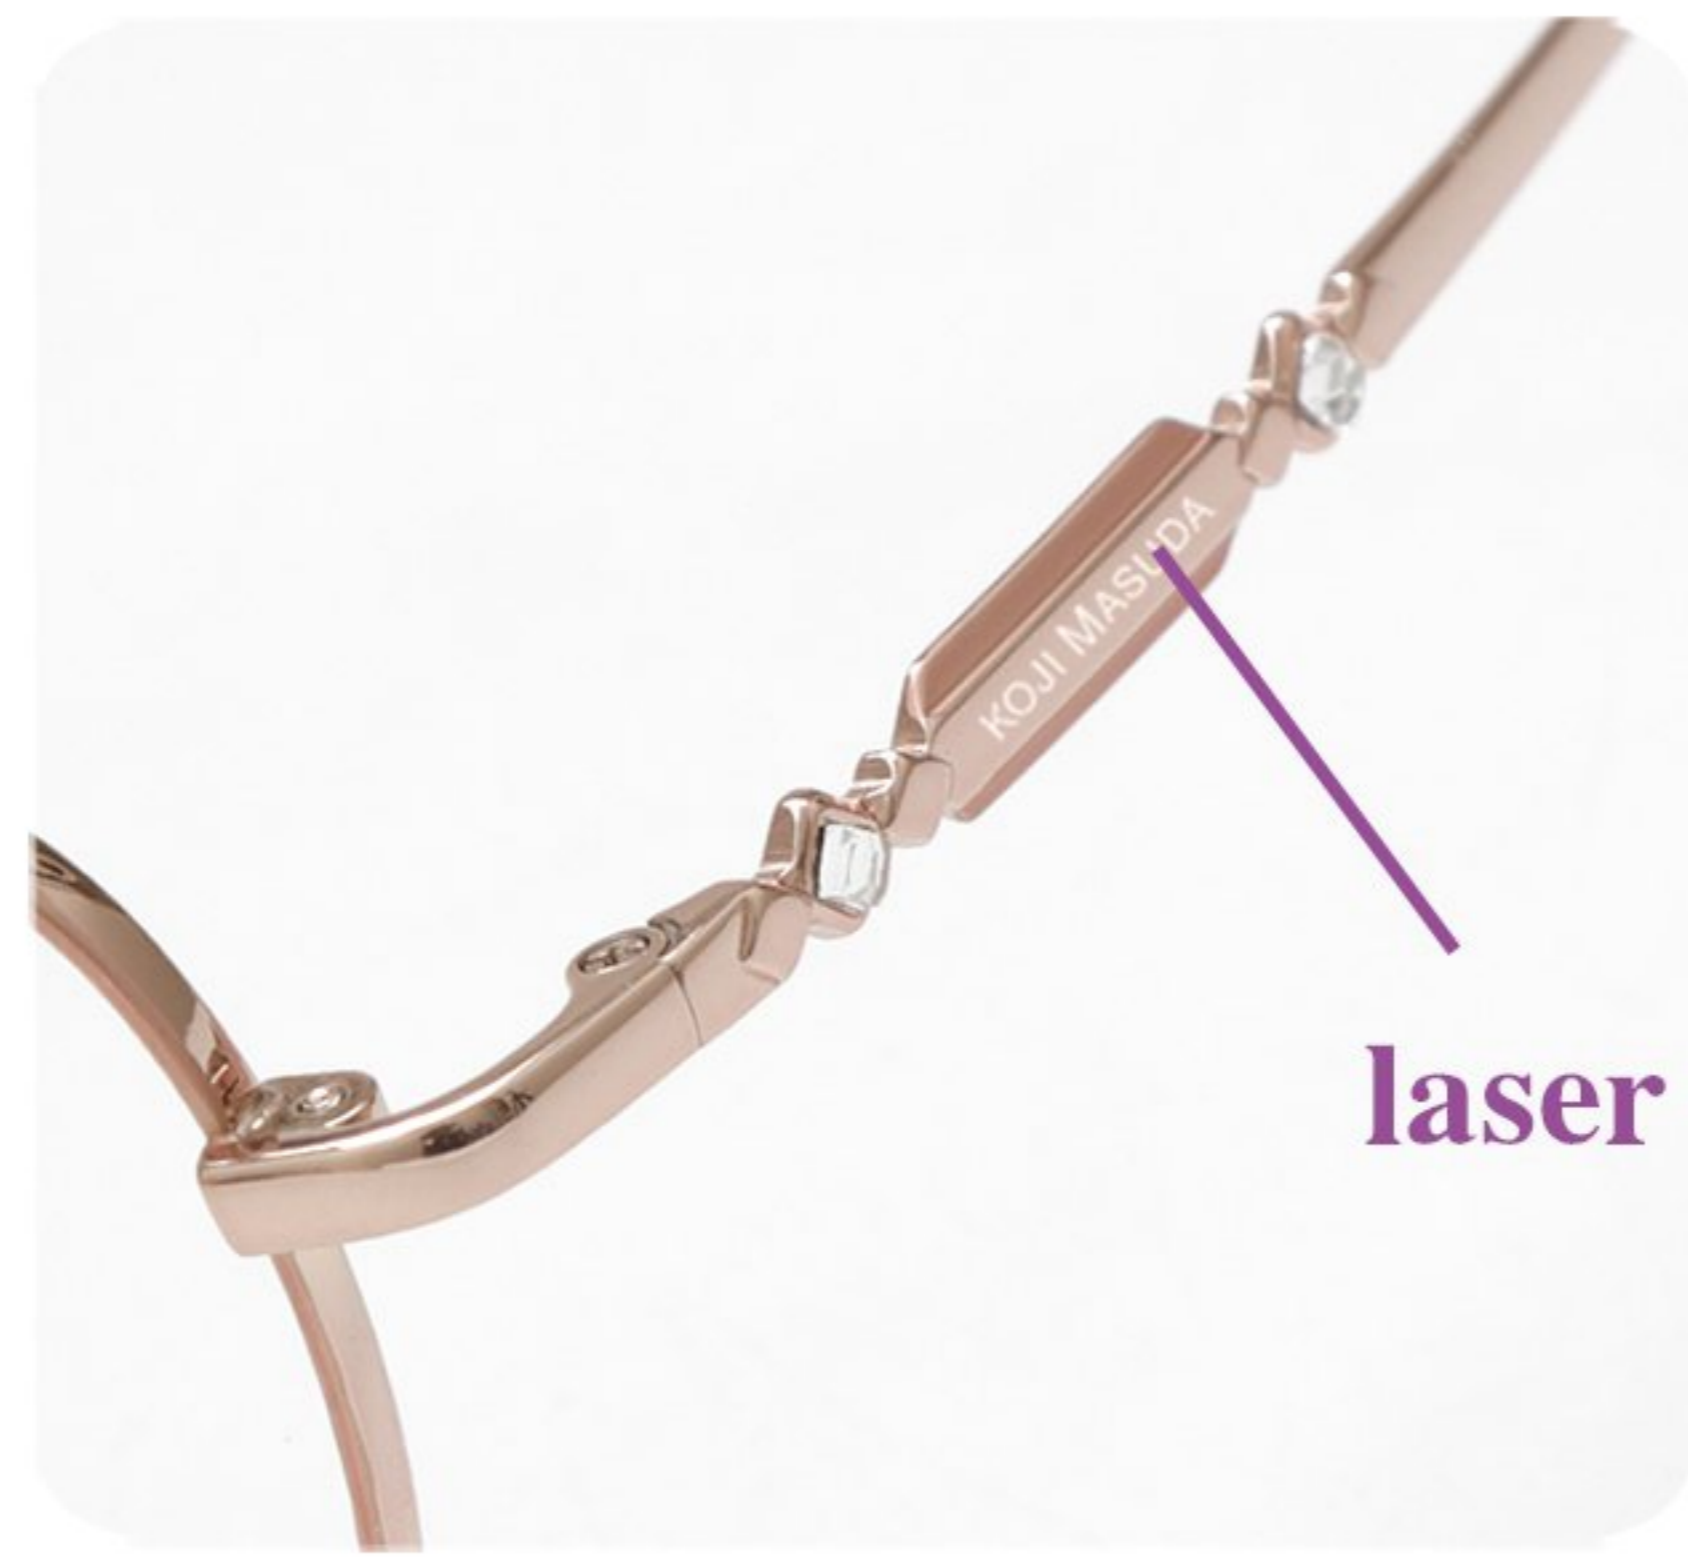

COLOR DISPLAY



C1 亮玫瑰金/哑玫瑰金
Bright Rose Gold/Matte Rose Gold



C2 拉丝玫金/大象灰
Brushed Rose Gold/Elephant Gray



C3 亮玫瑰金/紫
Bright Rose Gold/Purple



C4 亮玫瑰金/粉
Bright Rose Gold/Pink



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



C6 深枪/亮黑
Deep Gun/Bright Black

KOJI MASUDA



MODEL: 70127

SIZE: 53-18-145



COLOR DISPLAY



C1 亮玫瑰金/哑玫瑰金
Bright Rose Gold/Matte Rose Gold



C2 浅金/驼色
Light Gold/Camel



C3 浅金/哑深蓝
Shallow Gold/Mute Deep Blue



C4 亮玫瑰金/哑灰兰
Bright Rose Gold/Dumb Grey Orchid



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



C6 亮中枪/亮黑
Bright Gun/Bright Black

KOJI MASUDA



MODEL: 70126

SIZE: 51-19-140



COLOR DISPLAY



C1 亮玫瑰金
Bright Rose Gold



C2 哑紫/哑红
Mute Purple/Matte Red



C3 浅金/紫
Light Gold/Purple



C4 亮玫瑰金/象牙灰
Bright Rose Gold/Ivory Grey



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



 
C6 亮中枪/亮黑
Bright Gun/Bright Black

KOJI MASUDA



MODEL: 70123

SIZE: 51-18-142

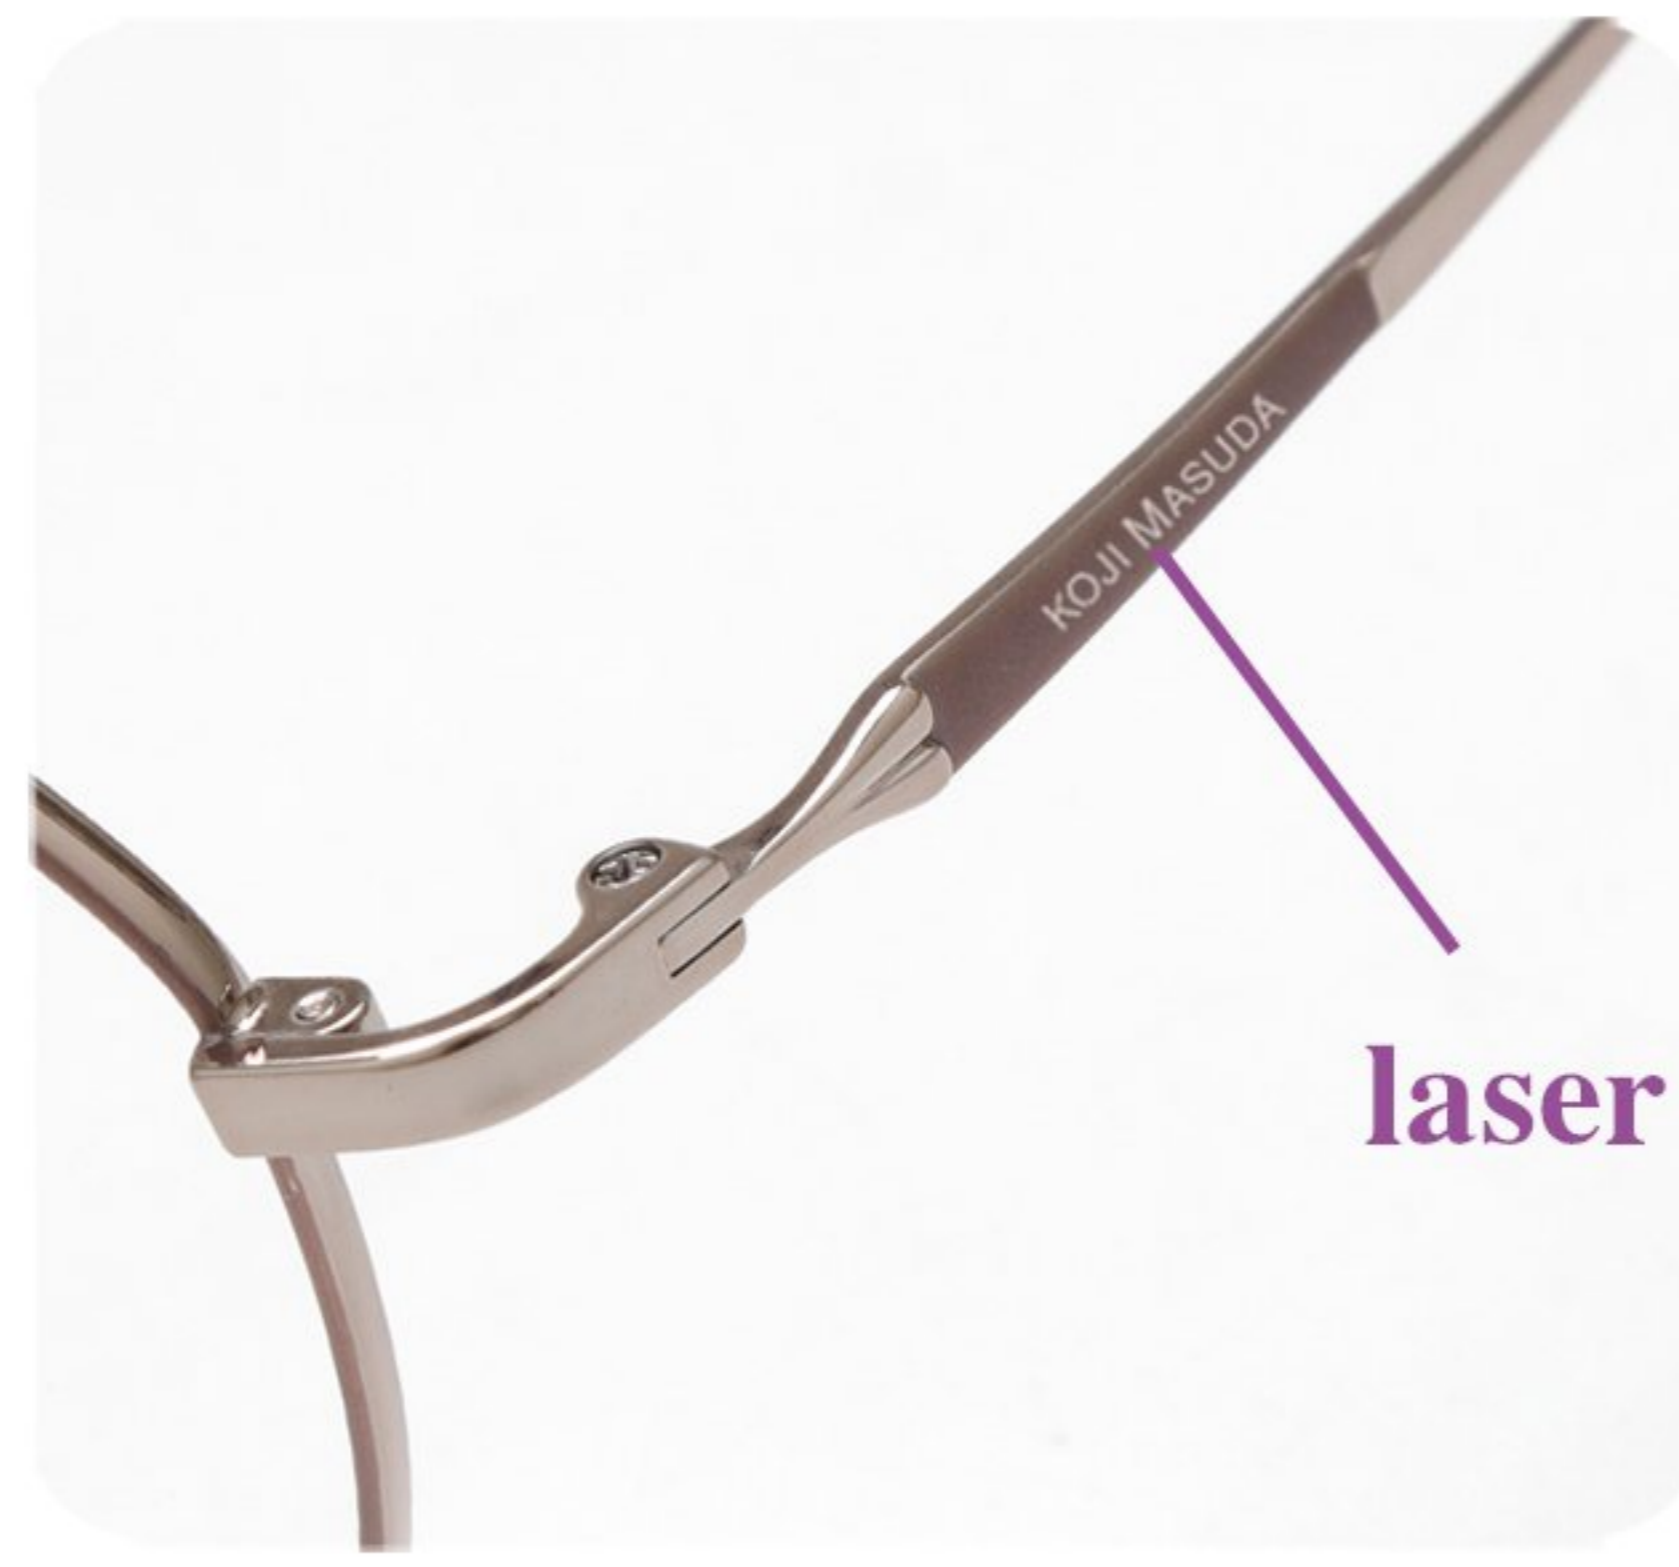

COLOR DISPLAY



C1 亮玫瑰金/渐变紫
Bright Rose Gold/Gradient Purple



C2 紫晶/灰粉
Purple Gold/Grey Powder



C3 亮玫瑰金/浅粉
Bright Rose Gold/Light pink



C4 亮银/灰紫
Bright Silver/Grey Purple



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



 
C6 深枪/亮黑
Deep Gun/Bright Black

KOJI MASUDA



MODEL: 70121

SIZE: 49-18-143

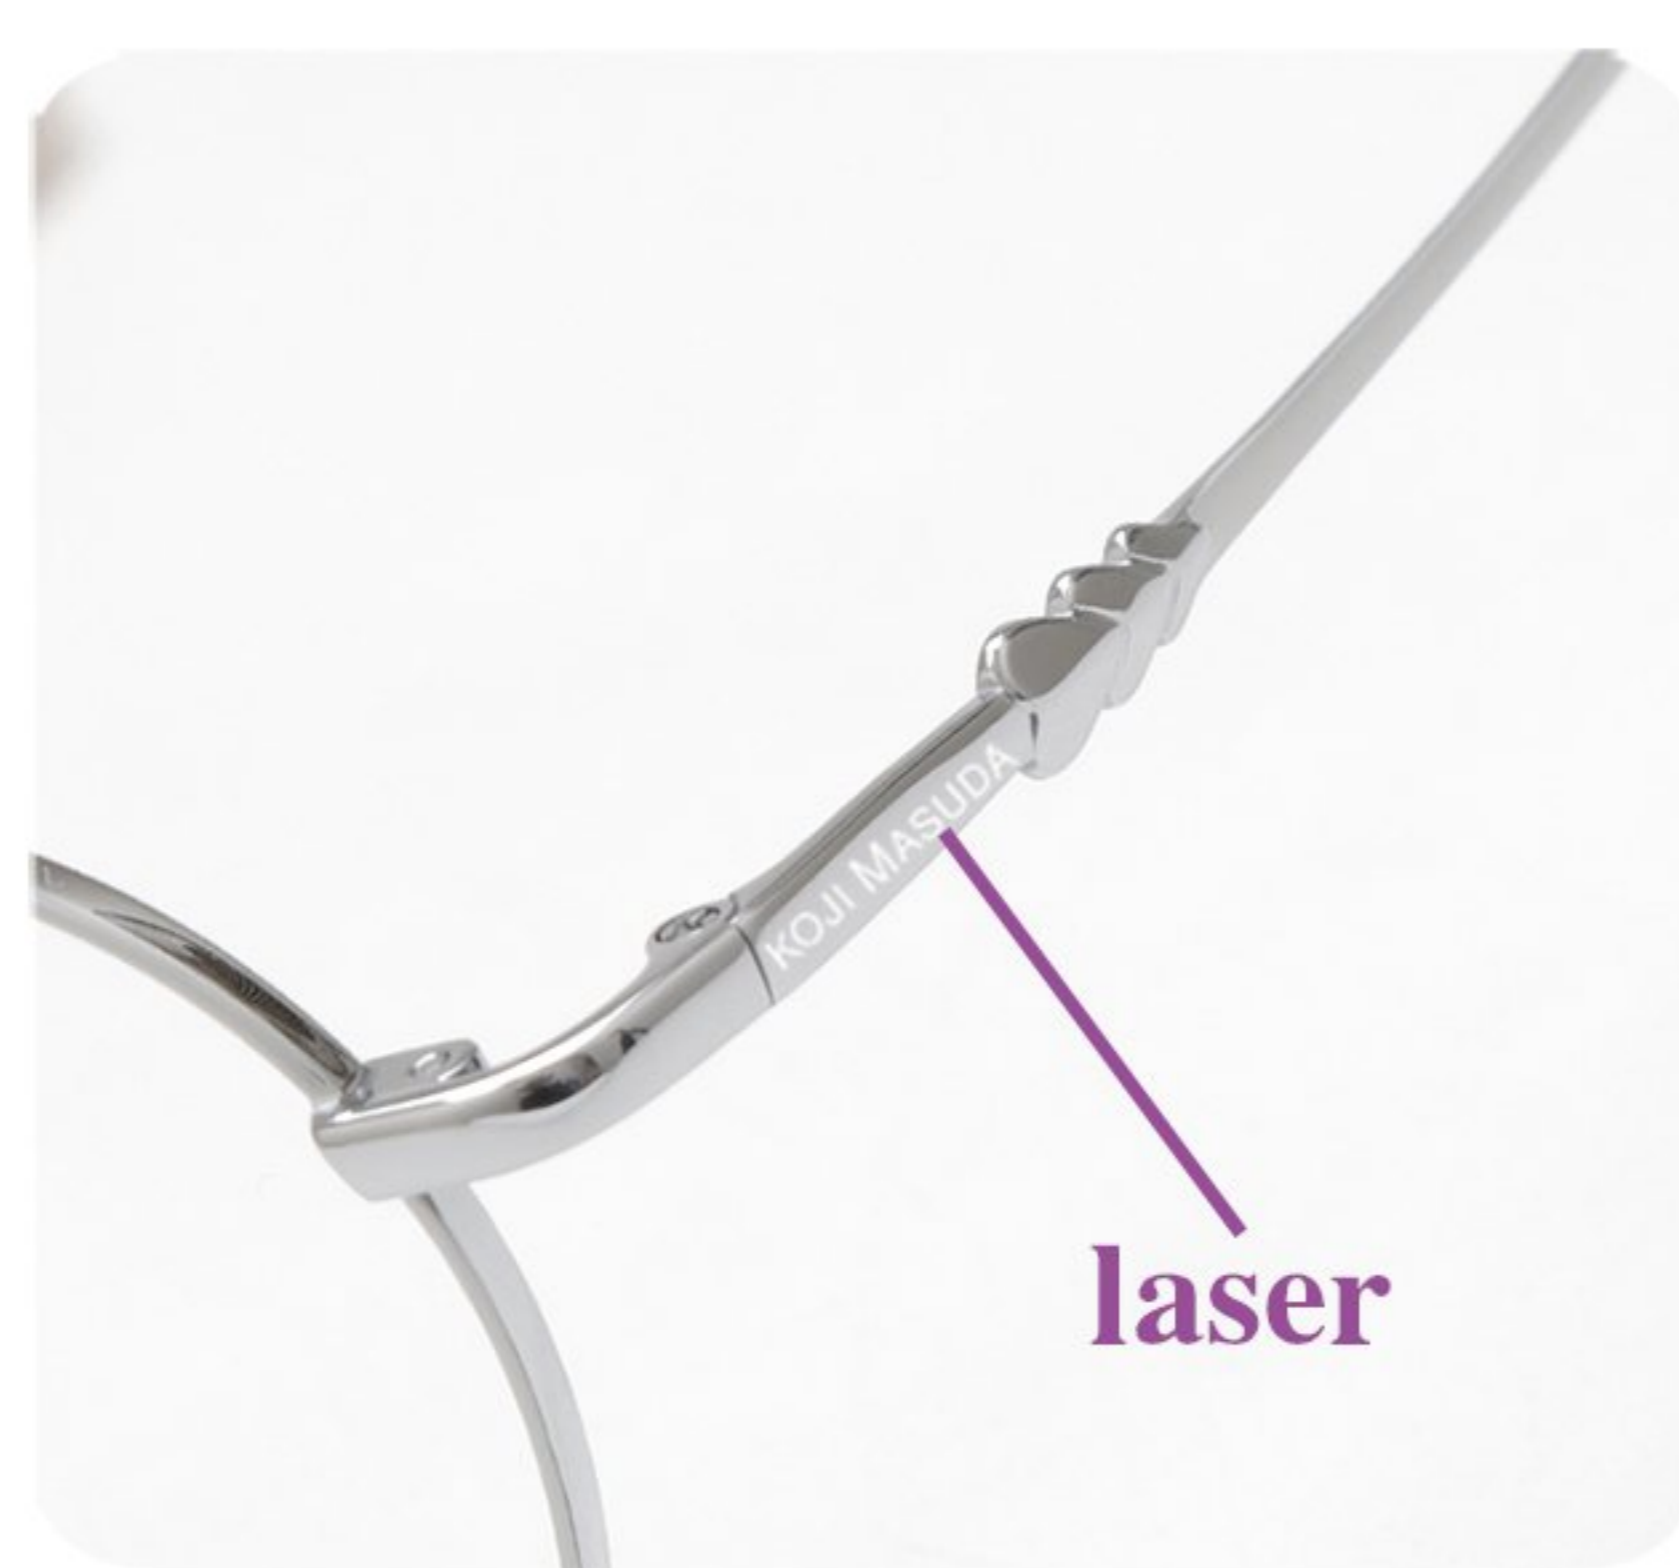

COLOR DISPLAY



C1 粉金/珊瑚粉
Rose Gold/Coral Pink



C2 亮银/奶油白
Bright Silver/Cream White



C3 浅金/紫
Light Gold/Purple



C4 亮玫瑰金/哑黑
Bright Rose Gold/Matte Black



C5 亮玫瑰金/哑枪
Bright Rose Gold/Dummy Gun



C6 深枪/亮黑
Deep Gun/Bright Black

KOJI MASUDA



MODEL: 70120

SIZE: 50-18-140



COLOR DISPLAY



C1 亮浅粉/哑米灰色
Bright Light Pink/Matte Beige



C2 亮银/紫
Bright Silver/Purple



C3 浅金/奶油白
Light Gold/Cream White



C4 亮玫瑰金/哑黑
Bright Rose Gold/Matte Black



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



C6 亮中枪/亮黑
Bright Gun/Bright Black

KOJI MASUDA



MODEL: 70143

SIZE: 51-18-142



COLOR DISPLAY



C1 亮玫瑰金/哑玫瑰金
Bright Rose Gold/Dumb Rose Gold



C2 亮玫瑰金/淡粉
Bright Rose Gold/Lght Pink



C3 浅金/哑黑
Light Gold/Matte Black



C4 浅金/紫
Light Gold/Purple



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



 
C6 亮中枪/亮黑
Bright Gun/Bright Black

KOJI MASUDA



MODEL: 70141

SIZE: 51-18-142

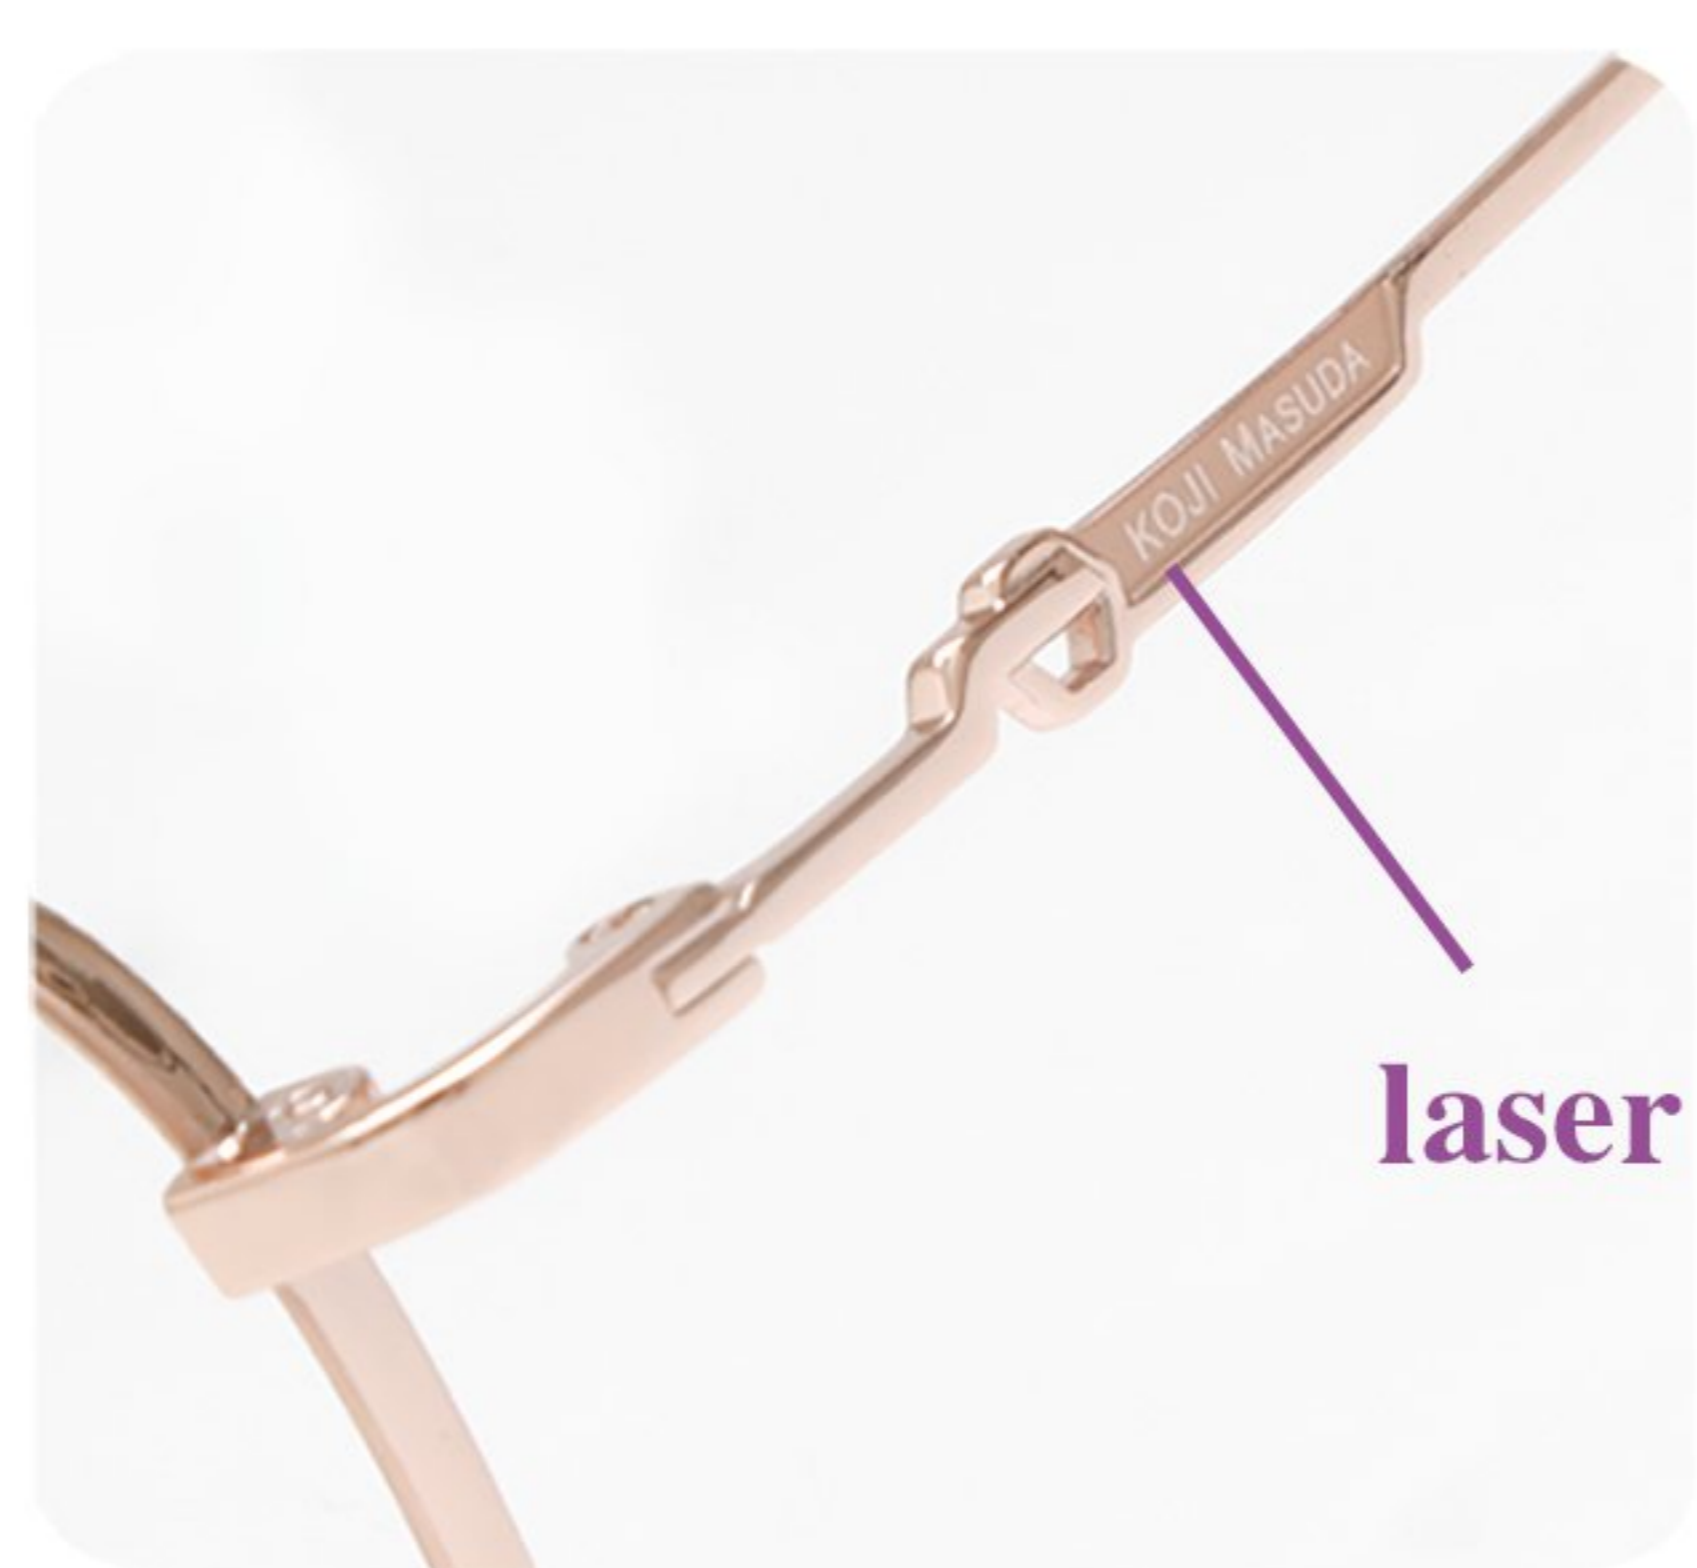

COLOR DISPLAY



C1 亮中枪/哑玫粉
Bright Gun/Matte Rose Pink



C2 亮玫瑰金/哑玫瑰金
Bright Rose Gold/Dumb Rose Gold



C3 浅金/哑黑
Light Gold/Matte Black



C4 浅金/薰衣草紫
Light Gold/Lavender Purple



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



C6 亮中枪/亮黑
Bright Gun/Bright Black

KOJI MASUDA



MODEL: 70122

SIZE: 52-18-142



COLOR DISPLAY



C1 亮玫瑰金/哑玫瑰金
Bright Rose Gold/Dumb Rose Gold



C2 浅金/紫
Light Gold/Purple



C3 浅金/象牙白
Light Gold/Ivory White



C4 亮玫瑰金/哑黑
Bright Rose Gold/Matte Black



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



 
C6 深枪/亮黑
Deep Gun/Bright Black

KOJI MASUDA




MODEL: 70137

SIZE: 53-18-142

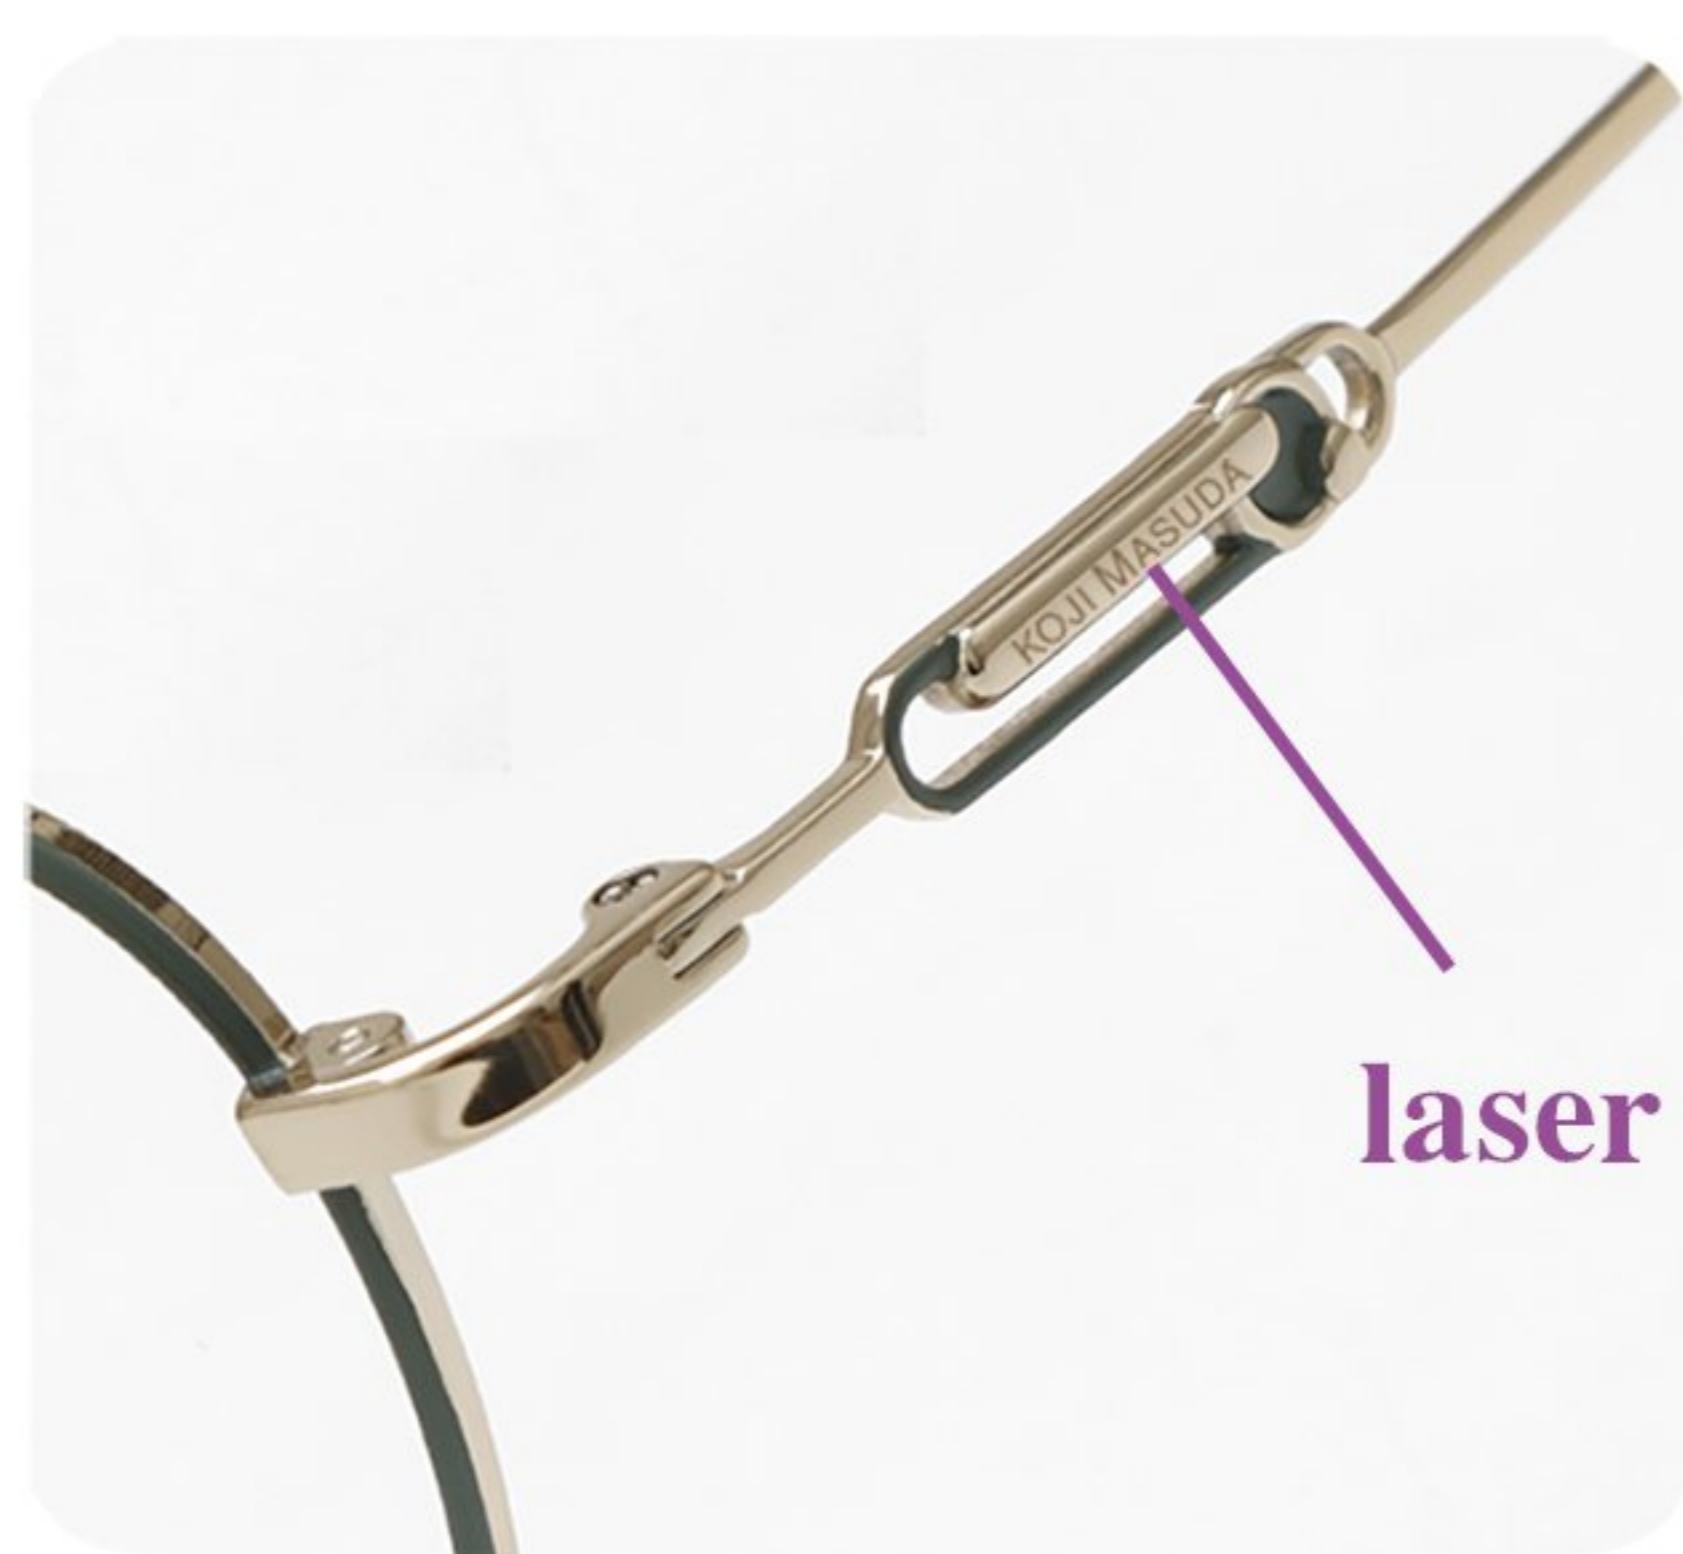

laser

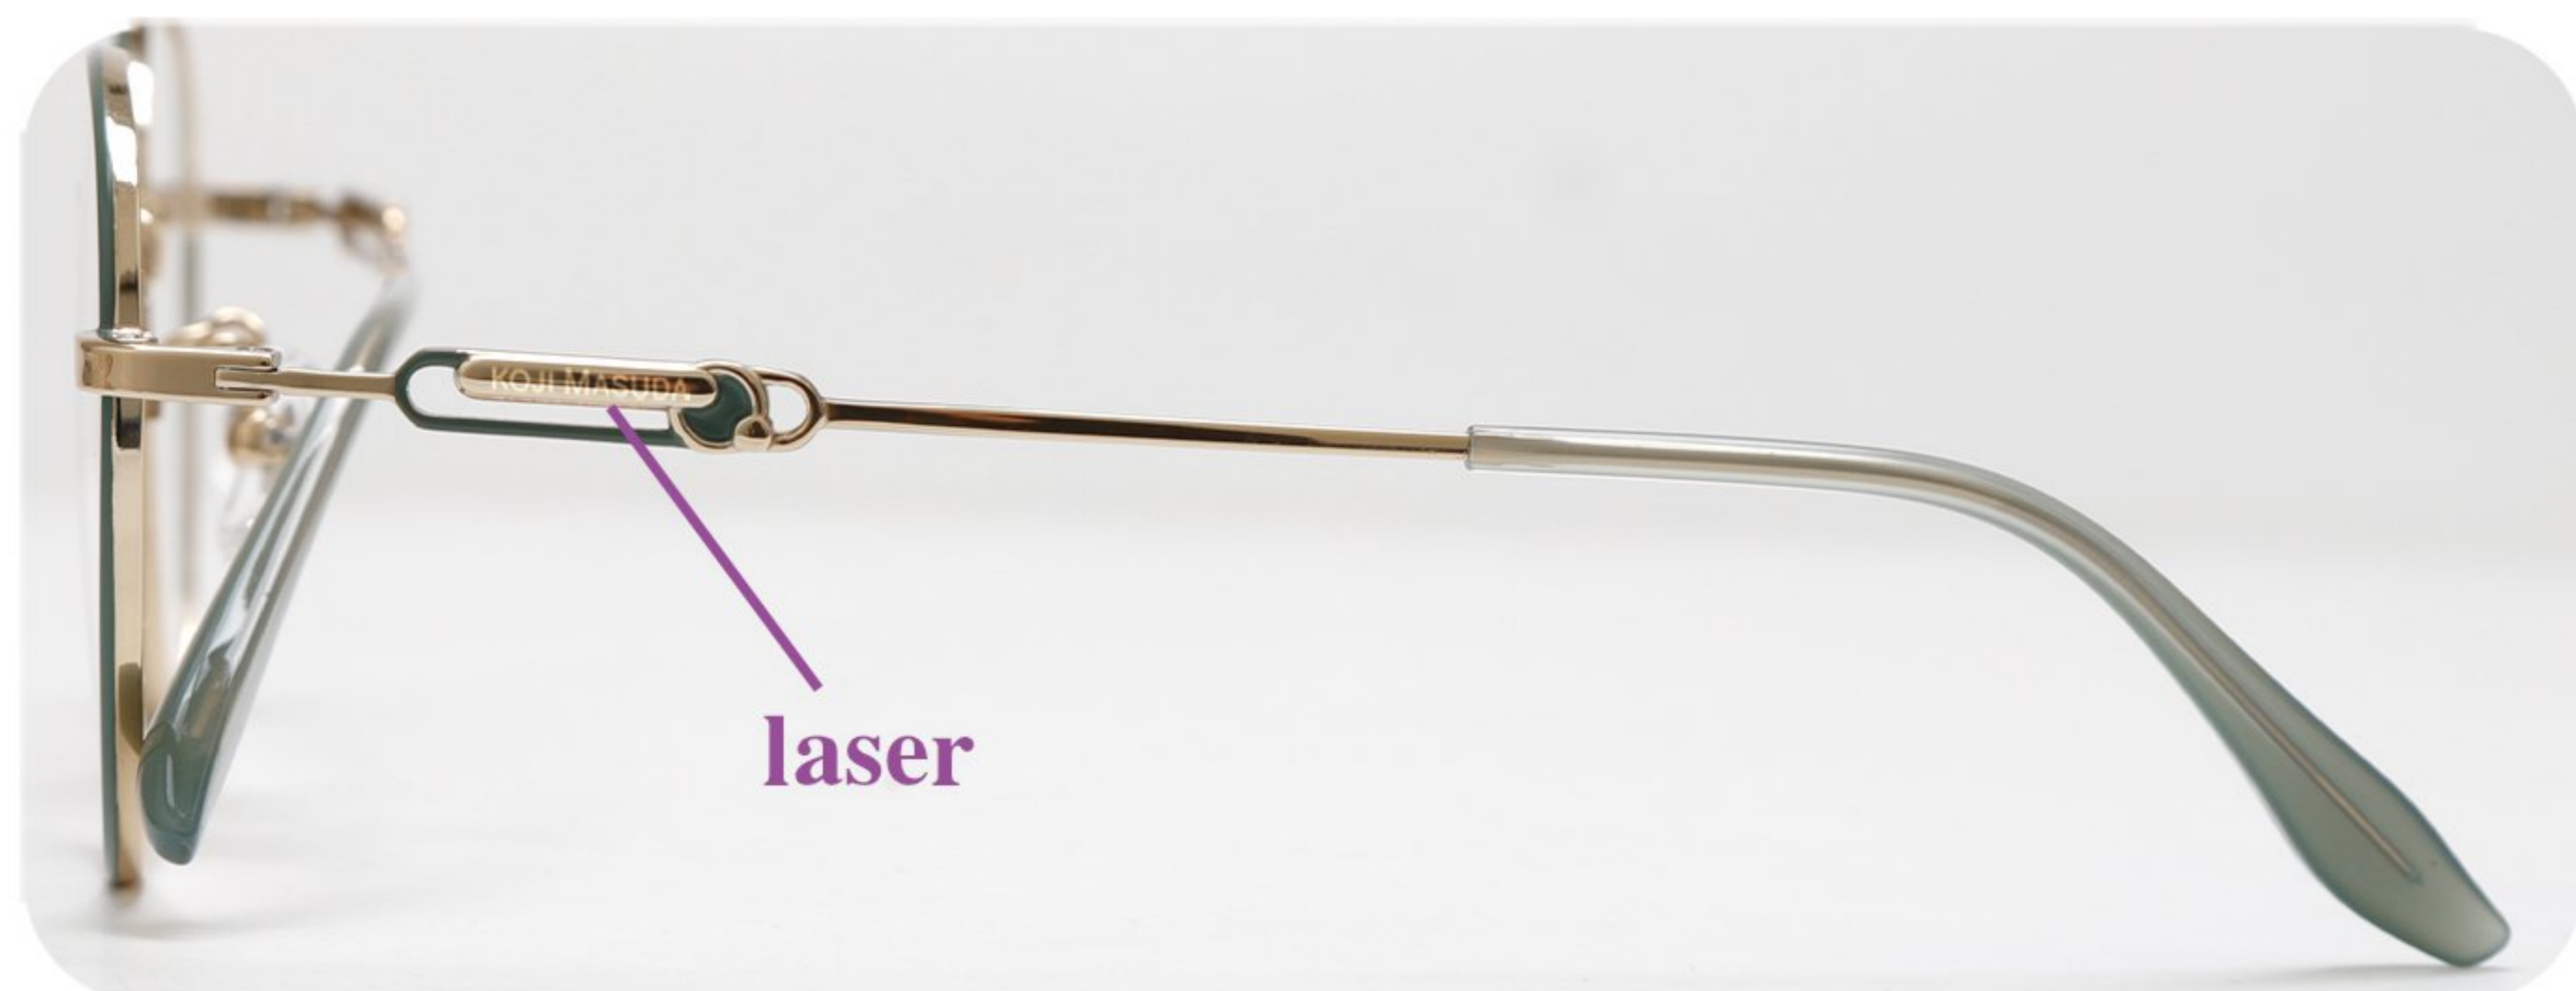 

laser



COLOR DISPLAY



C1 亮玫瑰金/哑玫瑰金
Bright Rose Gold/Dumb Rose Gold



C2 浅金/粉
Light Gold/Pink



C3 浅金/绿
Light Gold/Green



C4 浅金/驼灰
Light Gold/Camel Grey



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



C6 深枪/亮黑
Deep Gun/Bright Black

KOJI MASUDA



MODEL: 70129

SIZE: 50-16-143



COLOR DISPLAY



C1 亮玫瑰金/哑玫瑰金
Bright Rose Gold/Dumb Rose Gold



C2 亮玫瑰金/浅绿
Bright Rose Gold/Light Green



C3 亮玫瑰金/浅紫
Bright Rose Gold/Light Purple



C4 浅金/淡粉
Light Gold/Light Pink



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



 
C6 深枪/亮黑
Deep Gun/Bright Black

KOJI MASUDA



MODEL: 70125

SIZE: 49-18-142

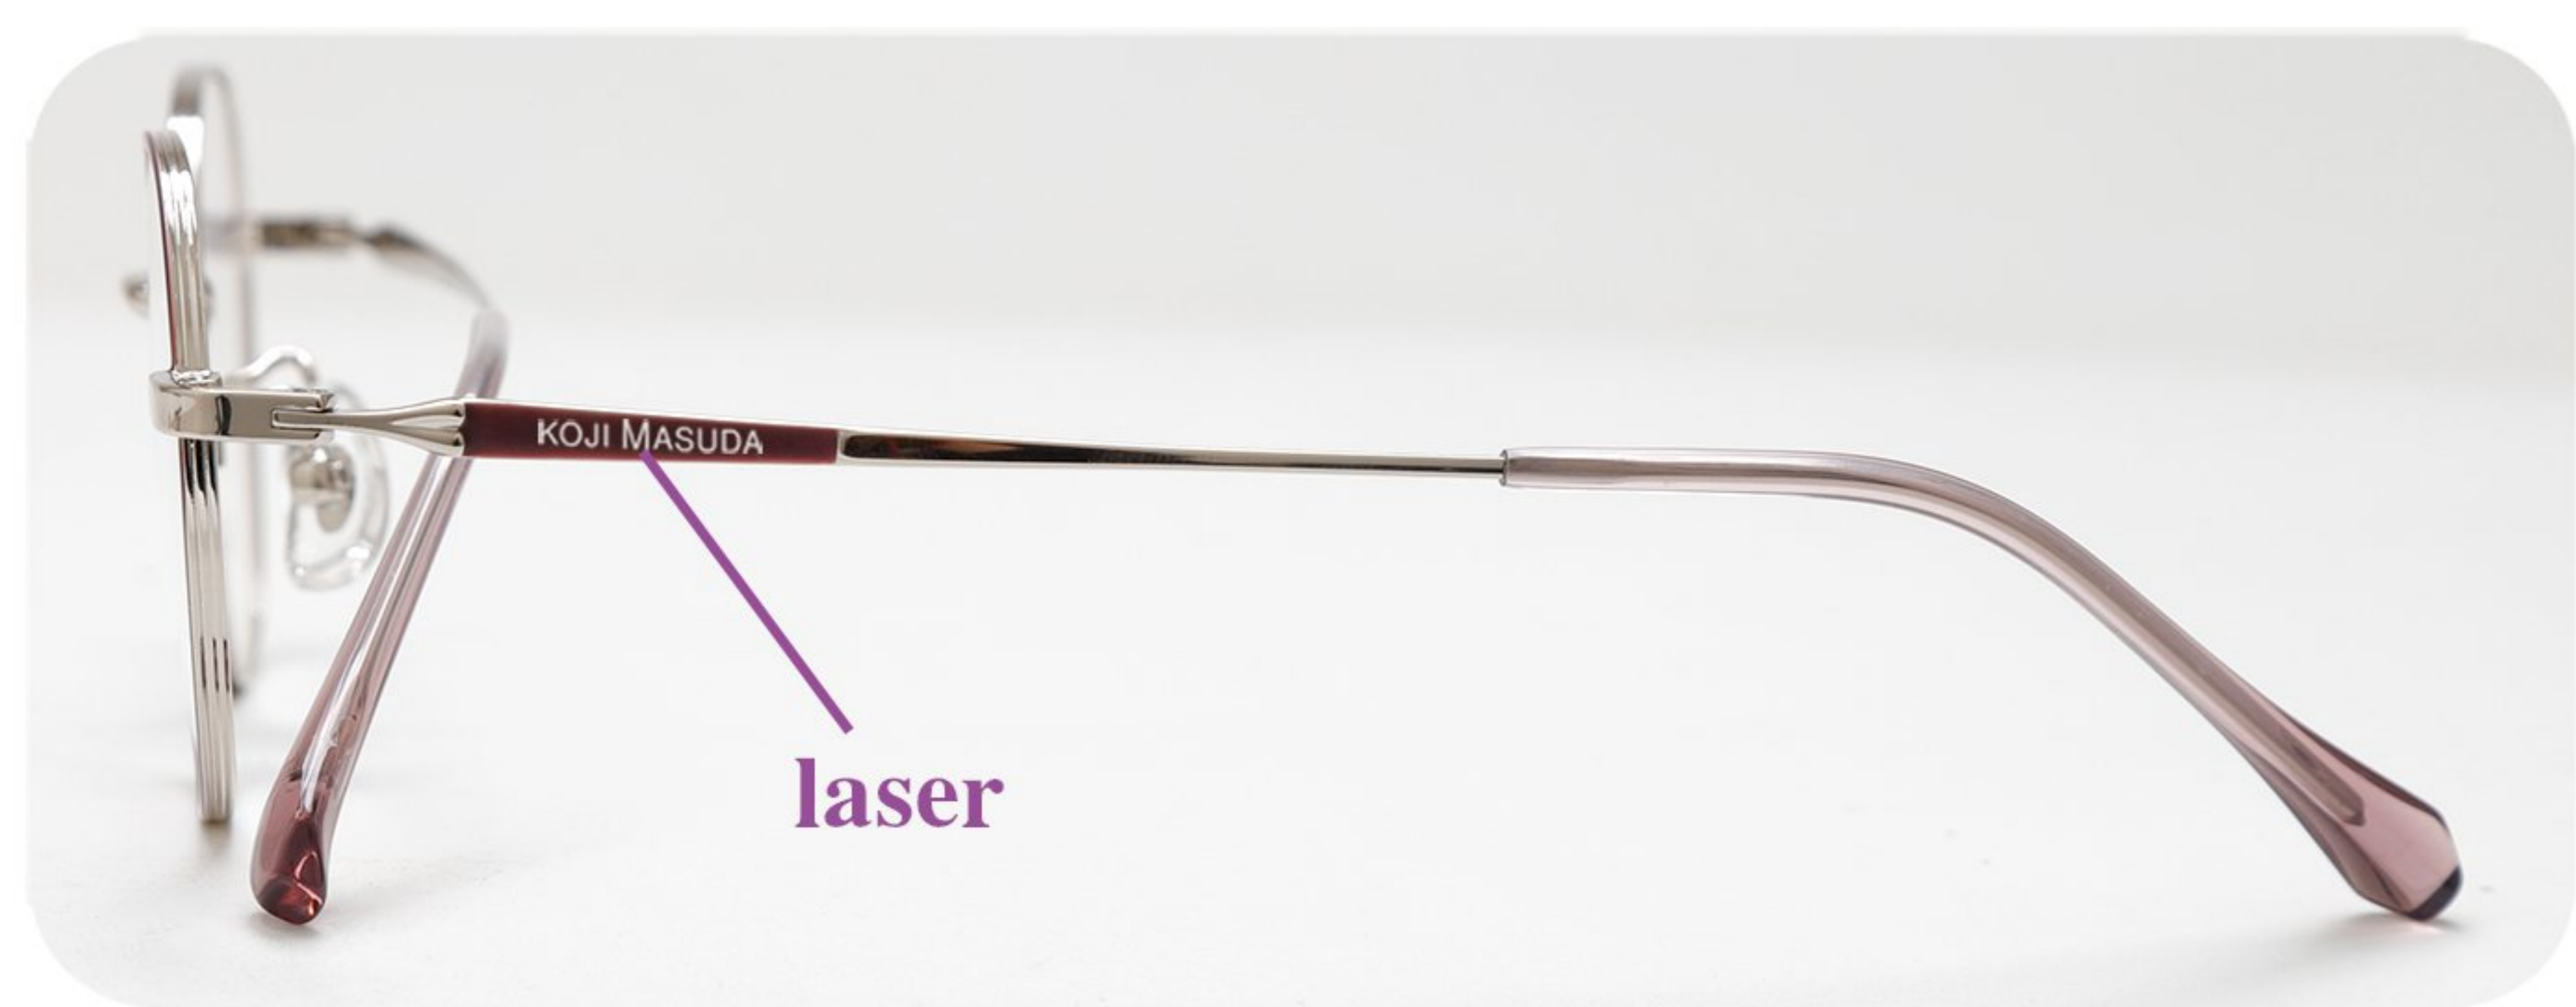

COLOR DISPLAY



C1 亮玫瑰金/哑玫瑰金
Bright Rose Gold/Dumb Rose Gold



C2 浅金/浅杏
Light Gold/Light Apricot



C3 浅金/棕
Light Gold/Brown



C4 亮浅棕/深紫
Bright Light Brown/Deep Purple



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



C6 深枪/亮黑
Deep Gun/Bright Black

KOJI MASUDA



MODEL: 70122

SIZE: 52-18-142



COLOR DISPLAY



C1 亮玫瑰金/哑玫瑰金
Bright Rose Gold/Dumb Rose Gold



C2 浅金/紫
Light Gold/Purple



C3 浅金/象牙白
Light Gold/Ivory White



C4 亮玫瑰金/哑黑
Bright Rose Gold/Matte Black



C5 亮玫瑰金/亮中枪
Bright Rose Gold/Bright Gun



C6 深枪/亮黑
Deep Gun/Bright Black